



★ ★ ★ ★ ★ **HELLO KITTY** ★ ★ ★ ★ ★

©1976, 2013 SANRIO CO., LTD.

Sleeping Kitty Alarm Clock with Digital Tuning Radio



USER MANUAL
KT2052P

THIS PRODUCT IS NOT A TOY!

Caution: Electrically Operated Product – Please use care when plugging into AC outlet

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



Caution marking is located at the bottom of apparatus.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions
2. Keep these instructions
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wider blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.

13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
15. Use only with the cart, stand, trip pot bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement parts as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.



COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WELCOME

We have taken great care to make sure that your Clock Radio was in perfect working order when it left our factory. It has been designed to give you many years of enjoyment and trouble free operation. Read this manual before operating this unit to become familiar with its features and obtain the performance that will bring you continued enjoyment for many years.

For future reference, record the serial number in the space provided.

Model Number: KT2052P

Serial Number: _____

IMPORTANT NOTES

Avoid installing the unit in locations described below:

 
- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- Dusty, humid or moist places.
- Places subject to constant vibration.

POWER SOURCE

This radio is designed to operate on 120V~ 60Hz AC power only. Do not attempt to operate the radio on any other power source. You could cause damage to the radio that is not covered by your warranty.

The radio should be connected to an AC outlet that is always 'live'. Do not connect the radio to an outlet that is controlled by a wall switch. When the power to the radio is interrupted, the battery backup system takes over to maintain the time and alarm settings. To maximize the life of the back up battery, keep the radio connected to a 'live' AC outlet at all times.

This unit has a polarized AC plug with one wide blade and one narrow blade. This plug will only fit into a matching polarized AC outlet. This is a safety feature to reduce the possibility of electric shock. If this plug will not fit in your AC outlet, you probably have an outdated non-polarized outlet. You should have your outdated outlet changed by a qualified, licensed electrician. Do not file the wide blade on the plug, or use an adapter to make the plug fit onto your outlet. This defeats the safety feature and could

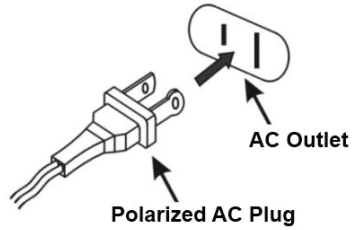

expose you to electric shock.

PREPARATION FOR USE

UNPACKING AND SET UP

- Place your clock radio on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the AC power cord of the radio and extend it to its full length. The FM antenna is built-in to this cord. It must be fully extended to provide the best FM reception.

BATTERY BACKUP SYSTEM

The battery backup system in this clock radio will maintain the time and alarm settings in the event of a temporary power interruption. When the AC power is restored the time and alarm settings will be correct.

The battery backup system requires two “AAA” (UM-4) batteries (not included). We recommend that you install an alkaline battery for longest life and best performance.

NOTE: The display will not exhibit time during power failure but the clock will keep correct time internally.

 
TO INSTALL THE BATTERY

- Open the battery compartment cover on the bottom of the radio by pressing the tab in the direction of the arrow.
- Install two “AAA” (UM-4) batteries to the battery clip in the right direction, and replace the cover.

IMPORTANT:

After you reset the time, be sure to reset your alarm settings as well.

LOCATION OF CONTROLS AND INDICATORS

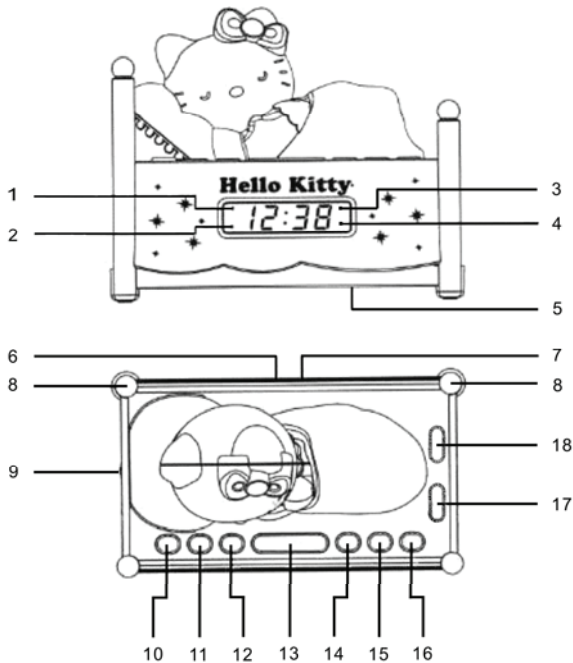

1. PM Indicator	10. RADIO FM/AM, OFF, ALARM OFF Button
2. ALARM1 Indicator	11. ALARM1 SET, VOLUME - Button
3. Sleep indicator	12. ALARM2 SET, VOLUME + Button
4. ALARM2 Indicator	13. SNOOZE/ DIMMER Button
5. Battery Compartment (At Bottom of Cabinet)	14. DOWN/ TUNING - Button
6. AC Power Cord	15. UP/TUNING + Button
7. Speaker (At Rear Cabinet)	16. TIME/SLEEP Button
8. NIGHT LIGHT	17. AUTO SCAN Button
9. FUNCTION Switch (OFF/ON/ LIGHT OFF)	18. MEMORY Button

 
POWER CONNECTION

Plug the AC cord of the radio into a 120V~ 60Hz AC power outlet socket.

SETTING THE CLOCK

When you connect the clock radio to your AC outlet for the first time and switch ON the power, the time digits will flash on the display. The flashing will stop after you set the time.

1. When the radio is off, hold the TIME button 2 seconds. The HOUR digits will flash.
2. Press the UP or DOWN button to set the correct Hour. Press the TIME button, then the MINUTE digits will flash.
3. Press the UP or DOWN button to set the correct Minute. Press the TIME button again to confirm.

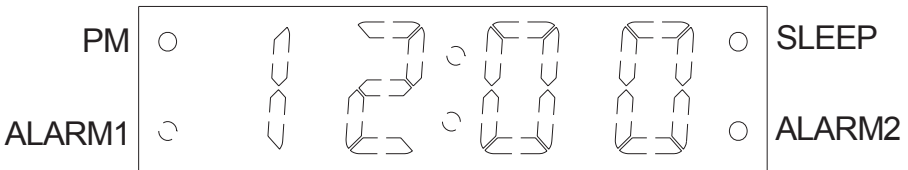

NOTE: Be sure to observe the PM indicator to make sure that the time is set correctly for AM or PM. If the PM indicator is 'Off', the time displayed is "AM". If the PM indicator is 'On', the time displayed is "PM".

The time setting will be automatically terminated after idling for a few seconds.

RADIO OPERATION

Turn on or Turn off Radio

Press [RADIO FM/AM] button once to turn on FM radio. Press [RADIO FM/AM] button one more time to change to AM band. Hold [RADIO FM/AM] button for two seconds to turn off the Radio.

Select the station

The display shows the radio frequency then the current time. Press [- TUNING +] button to select the desired station. When you hold [- TUNING +] button for 2 seconds, the radio will search the nearest station.

Volume control

Press [- VOLUME +] button to adjust the volume to your choice of 16 levels.

Auto Scan

Hold [AUTO SCAN] button 2 seconds, then the unit will search and set 10 stations. Press [AUTO SCAN] button and then UP or DOWN button to select the preset stations from P01 to P10.

SET/RETRIEVE RADIO PRESETS

 
1. Use the [- TUNING +] button to select the desired radio station.
2. Press and hold the [MEMORY] button; the preset memory number will flash in the LED display.
3. Press the UP or DOWN button to change to the desired preset number.
4. Press the [MEMORY] button again to save the current radio station to the desired preset station.
5. Repeat steps #1 to #4 to set up to 10 stations.
6. To retrieve the preset stations already programmed, press [AUTO SCAN] button and then UP or DOWN button to select the desired preset station.
7. When you finished listening, hold [RADIO FM/AM] button for two seconds to turn off the Radio.

ANTENNA INFORMATION

- AM - The AM bar antenna is inside the radio. If AM reception is weak, change the position of the entire radio until the internal antenna picks up the strongest signal.
- FM - The FM antenna is built into the AC power cord. If FM reception is weak, try varying the position and direction of the power cord until you find the strongest signal.


ALARM OPERATION

1. When the radio is off, press ALARM1 button, the indicator of ALARM1 and the alarm time flash.
2. Hold the ALARM 1 button when the alarm time is flashing, the HOUR digits will flash (MINUTE digits become solid). Press UP or DOWN button to set the alarm Hour.
3. Press the ALARM 1 button, the MINUTE digits will flash (HOUR digits become solid). Press UP or DOWN button to set the alarm Minute.
4. Press the ALARM 1 button, the Buzzer alarm sound indicator will flash as below:

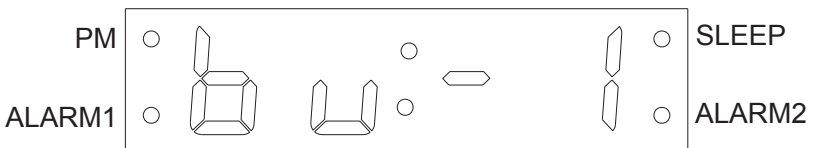

5. Press UP or DOWN button to select the alarm sound between Buzzer and Radio. Press the ALARM 1 button to confirm the alarm setting. The ALARM 1 indicator will be on. When the alarm time is reached, the ALARM1 indicator will flash and the Buzzer or Radio will sound.

 6. The display returns to the current time mode if ALARM1 button is not pressed for several seconds in the alarm setting mode. The alarm setting is not completed.
7. The display shows as below if Radio alarm sound is selected. The volume of Radio alarm will increase from MIN to MAX gradually.

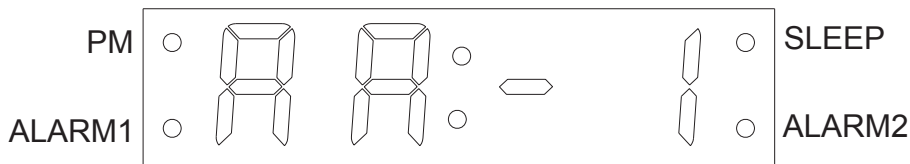

NOTE: You should tune to your desired radio station before setting the alarm time and choosing the Radio alarm sound.

Alarm 1 and Alarm 2 are operated in the same way.

Alarm 1 and Alarm 2 will sound at the pre-set time each day unless disabled.

To disable or resume the alarm, hold ALARM 1 or ALARM 2 button for 2 seconds. The ALARM 1 or ALARM 2 indicator will show when the alarm is on.

SNOOZE FUNCTION

When the alarm sounds, press SNOOZE button to suspend the alarm and activate the snooze function. Alarm will stop and sound again 9 minutes later. If the SNOOZE button is pressed again, the alarm will stop momentarily and sound again in 9 minutes and so on.

NOTE:

To turn off the alarm the alarm in Snooze mode, press the [ALARM OFF] button once.

SLEEP FUNCTION

When listening to radio, press SLEEP button to enter sleep mode. You can adjust the sleep timer from OFF -> 120mins -> 90mins -> 60mins -> 45mins -> 30mins -> 15mins by pressing the SLEEP button repeatedly. The unit will automatically turn off when the time expires. After the Sleep function is activated, the remaining time can be shown by pressing the SLEEP button once.

NIGHT LIGHT OPERATION

Switch the FUNCTION switch to LIGHT ON position to turn the night light on. Switch it to LIGHT OFF position to turn the night light off.

DIMMER

The display brightness can be switched by pressing the DIMMER button

POWER OFF

To save power, switch the FUNCTION switch to POWER OFF position to turn off the unit.

NOTE:

If there is no battery in the back-up battery compartment, the Time and Alarm settings will be lost when the power is switched off. Reset the clock and alarm settings after reconnecting the AC power cord.

CARE AND MAINTENANCE

1. Children should be supervised when using this appliance.
2. Periodically inspect for damage. If damaged, properly repair the radio before use.
3. If the cabinet becomes dusty, wipe the exterior with a soft dust cloth only. Never use dusting sprays or polishes on the cabinet.
4. If the cabinet becomes dirty or smudged with fingerprints it may be wiped with a soft cloth that has been slightly dampened with a mild soap and water solution.
5. Always disconnect the power cord from the AC outlet before cleaning. Never allow any liquid to get inside the cabinet.

NOTE:

If there is no battery in the back-up battery compartment, the Time and Alarm settings will be lost when the AC power cord is disconnected for cleaning. Reset the clock and alarm settings after reconnecting the AC power cord.

90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for **\$9.00** to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectraintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA.
1-800-777-5331

To register your product, visit the link below to enter your information.
<http://www.spectrainintl.com/wform.htm>

Licensed by:
Marino Andriani, LLC
Distributed by:
Spectra Merchandising International, Inc.
Chicago, IL 60634, USA
www.spectrainintl.com



©1976, 2013 SANRIO CO., LTD.
Used Under License.
www.sanrio.com



SIL-34037

0813

Printed in China