

**3-SPEED STEREO TURNTABLE
WITH CD AND CASSETTE MUSIC SYSTEM AND
PITCH CONTROL**



 
**MODEL: JTA-475
USER MANUAL**

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT
AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

BPC

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

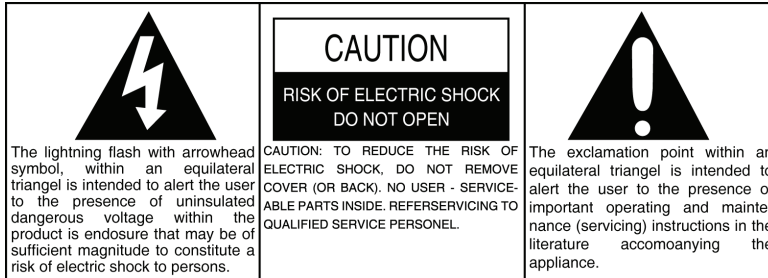

The Caution Marking is located at the back enclosure of the apparatus.
The Rating plate is located at the back enclosure of the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for a long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



 
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement part as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
20. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
21. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
22. Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
23. Battery shall not be exposed to excessive heat such as sunshine, fire or a hot oven, or mechanically crushing or cutting.
24. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
25. Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
26. Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
27. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
28. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
29. Excessive sound pressure from earphones and headphone can cause hearing loss.
30. Minimum distances of 10 cm around the apparatus for sufficient ventilation.
31. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
32. No naked flame sources, such as lighted candles, should be placed on the apparatus.
33. The use of apparatus in moderate climates.
34. Attention should be drawn to the environmental aspects of battery disposal. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
35. Working temperature: 15-40 °C.

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT. FULLY INSERT THE PLUG TO MAIN POWER SOCKET.

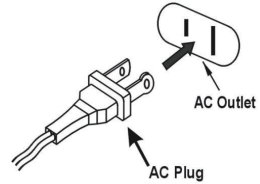

SAVE THESE INSTRUCTIONS

CAUTION

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM



This product contains a low power laser device.

Follow the advice below for safe and appropriate operation.

ON PROTECTION AGAINST LASER ENERGY EXPOSURE

- o As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- o Stop operation immediately if any liquid or solid object should fall into the cabinet.
- o Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- o Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door is still open.
- o This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air-flow of the unit by placing it in a place with poor ventilation, by covering it with a cloth or by placing it on a carpet.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit.
- When there is condensation inside the unit, the unit may not function normally. Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

Should any trouble occur, remove the power source and refer servicing to qualified personnel.

PRECAUTION FORE USE

- **UNPACK ALL PARTS AND REMOVE PROTECTIVE MATERIAL.**
- **DO NOT CONNECT THE UNIT TO THE MAINS BEFORE CHECKING THE MAINS VOLTAGE AND ALL OTHER CONNECTIONS HAVE BEEN MADE.**
- **DO NOT COVER ANY VENTS AND MAKE SURE THAT THERE IS A SPACE OF SEVERAL CENTIMETERS AROUND THE UNIT FOR VENTILATION.**

IMPORTANT NOTES

Avoid installing the unit in locations described below:

- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- Places subject to constant vibration.
- Dusty, humid or moist places.

PROTECT YOUR FURNITURE !!

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

DEAR JENSEN® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.

Customer's Record:

The serial number of this product is found on its back cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

 
Model Number: JTA-475

Serial Number: _____

GETTING START

SPEAKER CONNECTION

1. Insert the speaker cable ends (exposed wires) into the terminals located on the back of the main unit by pushing down the lever of the left speaker terminal and then the right speaker terminal
2. Connect the left speaker to the left speaker terminals with the red wire to L+ and the black wire to L -.
3. Connect the right speaker to the right speaker terminals with the red wire to R+ and the black wire to R -.

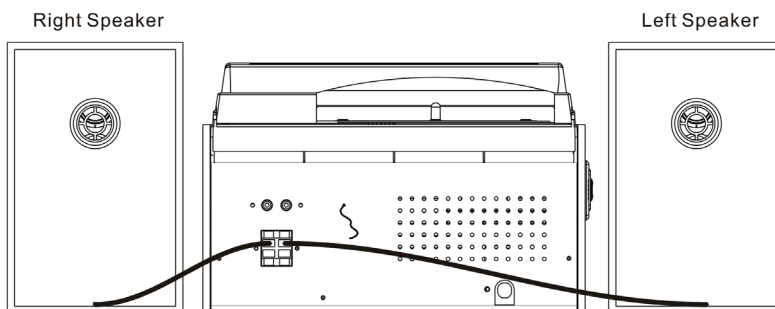

NOTE:

Make sure that the power is turned off when connecting or disconnecting the speakers. Make sure that the speakers are connected to the correct terminals.

 
CONNECTING THE AC POWER CORD

After connecting the speakers unwind the AC power cord fully and connect it to any convenient household 120V~ 60Hz AC outlet.

NOTE:




The product is designed to operate on normal 120V~ 60Hz AC only. Connecting this system to any other power supply could result in damage to the unit which is not covered by your warranty. You will noted that this system is equipped with a polarized AC power plug having one blade wider than the other. This is a safety feature.

If this plug does not fit into your existing AC outlet, do not try to defeat this safety feature by filling the wide blade to make it fit into your outlet. If this plug will not fit into your outlet, you probably have an outdated non-polarized AC outlet. You should have your outlet changed by a qualified licensed electrician.

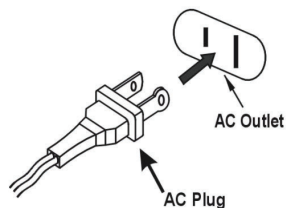

LOCATION OF CONTROLS AND INDICATORS

   FRONT VIEW & BACK VIEW

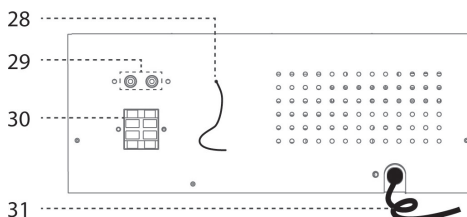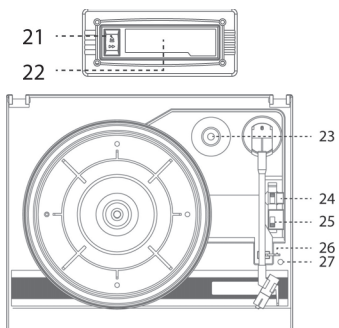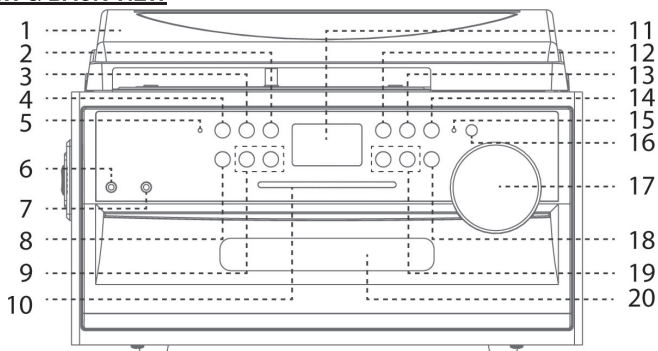


- | | |
|---|--|
| <ul style="list-style-type: none"> 1.) DUST COVER 2.) FM-ST/MO/PLAY MODE BUTTON 3.) FUNCTION BUTTON 4.) POWER ON/STANDBY BUTTON 5.) STANDBY LED INDICATOR 6.) 3.5MM STEREO HEADPHONE JACK 7.) 3.5MM AUX-IN JACK 8.) PRESET EQ BUTTON 9.) VOLUME + / - BUTTON 10.) LED DIAL POINTER 11.) LCD DISPLAY 12.) CD PROGRAM BUTTON 13.) AM/FM BAND / CD STOP ■ BUTTON 14.) CD PLAY/PAUSE ► BUTTON 15.) FM STEREO LED INDICATOR 16.) REMOTE SENSOR | <ul style="list-style-type: none"> 17.) TUNING KNOB 18.) CD TRAY OPEN/CLOSE ▲ BUTTON 19.) CD SKIP/SEARCH FORWARD ►► /BACKWARD ◄◄ BUTTON 20.) CD TRAY 21.) TAPE FAST FORWARD / EJECT BUTTON 22.) CASSETTE DUST COVER 23.) 45 RPM RECORD ADAPTOR 24.) 33/45/78 RPM SPEED SELECTOR 25.) TURNTABLE AUTO STOP SWITCH 26.) TONE ARM HOLDER 27.) PITCH ADJUST 28.) FM WIRE ANTENNA 29.) RCA LINE OUT L/R JACKS 30.) SPEAKER WIRE TERMINAL 31.) AC POWER CORD |
|---|--|

Remote Control (For CD Operation Only)


- 1) FUNCTION BUTTON
- 2) POWER ON/STANDBY BUTTON
- 3) SKIP/SEARCH FORWARD ►► BUTTON
SKIP/SEARCH BACKWARD ◄◄ BUTTON
- 4) FM-ST/MO/PLAY MODE BUTTON
- 5) VOLUME + / - BUTTON (For CD, Tape, Phono/AUX and Tuner)
- 6) CD TRAY OPEN/CLOSE ▲ BUTTON
- 7) CD PLAY/PAUSE ►|| BUTTON
- 8) PROGRAM BUTTON
- 9) AM/FM BAND / CD STOP ■ BUTTON
- 10) PRESET EQ BUTTON

 ** This is not an indicator and will not give any status if the remote is working or not.

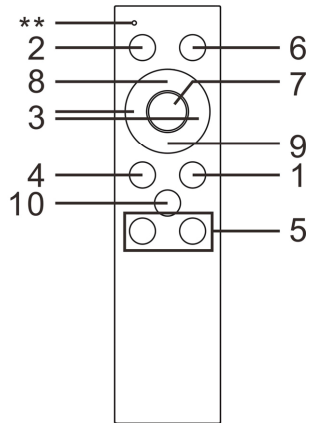

BATTERY INSTALLATION

 - 1.) Open the battery compartment cover.
- 2.) Insert two "AAA" (UM-4) batteries (included) and observe the polarity as indicated inside the battery compartment when installing.
- 3.) Replace the cover.

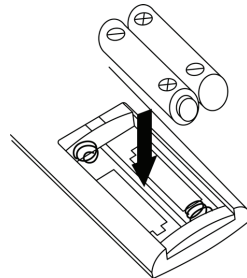

Battery Precautions

- Replacement of batteries must be done by an adult.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- If the batteries in the device have expired or the device is not to be used for a long period of time, remove the battery to prevent damage or injury from possible battery leakage.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed.
- Only batteries of the equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Dispose of batteries properly. Do not dispose of batteries in fire or leave in direct sunlight.
The batteries may explode or leak.
- Clean the contacts of the batteries and the contacts in the device prior to battery installation.

OPERATING INSTRUCTIONS

LISTENING TO THE RADIO

- 1.) Press the POWER button to turn the system "On", the LCD display will light up.
- 2.) Press the FUNCTION button to select the Radio mode and the display shows "F" for FM radio, "A" for AM radio.
- 3.) Press the ■/ AM/FM BAND button to select the desired band, AM or FM.
- 4.) Tune to your desired station with the TUNING knob. For FM radio, press the FM-ST/MO button to switch between FM STEREO mode or FM MONO mode. If FM STEREO is selected and you tune to an FM Stereo station, the FM STEREO LED Indicator will light.
- 5.) Press the VOLUME+/- buttons to adjust the volume level as desired.
- 6.) When you are finished listening, press the POWER button to turn the unit off.

Antenna Information

AM - The AM antenna is located inside the cabinet of the unit. If AM reception is weak, change the position of unit until the internal antenna picks up the strongest signal.

FM - For best FM reception, the FM lead wire antenna located on the back of the set should be fully unwound and extended. When an FM station is weak or distorted, listening is usually improved by switching to FM Mono mode by pressing the FM-ST/MON button.

PLAYING COMPACT DISCS

PLEASE READ THIS IMPORTANT INFORMATION:

CD mechanisms used in devices like this are designed to read all commercial CDs. It will also read self-compiled CD-R/CD-RW discs, but it may take up to 10 seconds for the actual playback to begin. If playback does not start, it is likely due to the quality of the CD-R/RW disc and/or the compatibility of the CD compilation software. The manufacturer is not responsible for the playback quality of CD-R/RW discs. Do not attach a label or seal to either side of the CD-R/RW disc. It may cause a malfunction.

The following procedures can be accomplished by using the remote or controls on the unit.

LOADING THE DISCS

- 1.) Press the POWER button to turn the system "On".
- 2.) Press the FUNCTION button to select the CD mode and the display shows "Cd".
- 3.) Press the ▲ Open/Close button to open the CD tray.
- 4.) Insert a CD disc onto the tray.
- 5.) Press the ▲ Open/Close button to close the CD tray. The CD player will read the disc and display the total track number of the disc.
- 6.) If a CD cannot be recognized by the player or if no disc is loaded, the display will show "no".

NOTES:

- Keep the CD disc tray closed when the system is not in use to prevent dirt and dust from entering the CD mechanism.
- Never place more than one CD in the CD tray. If two discs are loaded at the same time, the CD mechanism may jam and / or the discs themselves may be damaged.

CD PLAYBACK/PAUSE

After you have loaded the CD in the player:

- 1.) Press the **▶||** PLAY/PAUSE button to start playback from Track 1 on the disc.
- 2.) Press the VOLUME+/- buttons to adjust volume level as desired.
- 3.) To temporarily stop playback, press the **▶||** PLAY/PAUSE button again. The disc continues to spin, but no sound is heard. Press the **▶||** PLAY/PAUSE button once more to cancel pause and resume playback.
- 4.) To stop playback before the end of a disc, press the **■** STOP button.

IMPORTANT!!

If the disc is smudged or scratched it may skip or stop completely. This does not indicate a problem with the player. If this occurs, try playing another disc. If that disc plays properly, you may assume that the first disc is damaged and unplayable.

▶▶ or ◀◀ SKIP/SEARCH Buttons

To skip forward or backward during playback, press the **▶▶** or **◀◀** SKIP/SEARCH buttons repeatedly until the desired track number appears on the display. Playback will begin on the desired track.

To search for a particular passage on a track during playback, press and hold the **▶▶** or **◀◀** SKIP/SEARCH buttons. The player will search rapidly forward or backward. Release the buttons when you reach the desired point on the track and normal speed playback will resume at that point.

PROGRAMMED CD PLAYBACK

The CD player can be programmed to play any sequence of up to 20 tracks.

- 1.) Press the **■** STOP button before starting the programming.
- 2.) After the disc loads, press the PROGRAM button. The "PROG." indicator will appear flashing on the display. The display shows program track "01" and flashing to prompt you to enter the CD track to be programmed.
- 3.) Select the desired track number by pressing the **▶▶** or **◀◀** SKIP/SEARCH buttons.
- 4.) Press PROGRAM button to confirm the track number. Program track advances to "02" and flashing to prompt you enter another CD track.
- 5.) Repeat above steps 3-4 until you have stored up to 20 tracks in the program memory, display will show "FL".
- 6.) Press the **▶||** PLAY/PAUSE button to begin programmed playback. Playback will (up to total of 20) have been played.
- 7.) Press the **■** STOP button to stop programmed tracks playback. Press the **▶||** PLAY/PAUSE button will resume normal playback.

NOTE: If you press **▶▶** or **◀◀** SKIP/SEARCH buttons during programmed playback, the player will skip forward or backward to the next track that was programmed, and not to the next track in sequence on the disc that is being played.

PLAY MODE - REPEAT Playback

This system has a repeat function which allows you to continuously repeat one track, or all tracks.

Select the track to be repeated and begin playback. Press the PLAY MODE button, "Repeat" indicator **↻** will be flashing on the display and the selected track will be repeated continuously. Press the PLAY MODE button again (the second time), "Repeat" indicator **↻** will light on, the entire track will be repeated continuously.

PLAY MODE - RANDOM Playback

Press the PLAY MODE button for three times, "RAN." indicator will light on the display. Then, all the tracks in the CD will be played in random order.

Press the PLAY MODE button again (the fourth time), "RAN." indicator will go out and will resume to normal playback.

REPEAT/RANDOM Playback by Remote Control

Follow the same operation for the Repeat/Random playback by pressing the PLAY MODE button on the remote control

 


Note: Random play only available in CD normal play mode but not Programmed track mode.


STEREO PHONOGRAPH OPERATION

NOTE, BEFORE USE:

- Remove the stylus protector.
- Be sure that the tone arm is detached from the tone arm rest before operating, and replace again when finished.

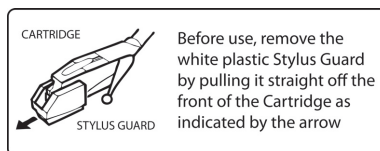

- 1.) Press the POWER button to turn the system "On".
- 2.) Press the FUNCTION button to select the PHONO/AUX mode and the display shows "PH".
- 3.) Raise the turntable dust cover.
- 4.) Release the tone arm clamp and remove the stylus protector.
- 5.) Place a record on the platter, over the center spindle (use the 45 RPM record adaptor when playing 45 RPM record).
- 6.) Set the Speed selector to 33, 45 or 78 rpm according to the record you are playing.
- 7.) Lift the tone arm from the rest and slowly move it over the record. The platter will begin to turn.
- 8.) Move the tone arm to the beginning of the record, or to the start of a particular track. Gently lower the tone arm onto the record to start playing.
- 9.) Press the VOLUME+/- buttons to adjust volume level as desired.
- 10.) When the record is played to the end of the record, the platter will automatically stop rotating. Lift the tone arm and return it to the rest position.
- 11.) To stop the record manually when playing, lift up the tone arm and return it to the rest position.

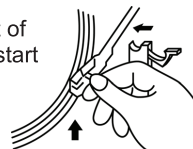 



REMARK: Some types of records may have an auto-stop area outside the preset limit, so the turntable may stop before the last track finishes. In this case, set the auto-stop switch to the "OFF" position. This allows the record to play to the end, but it will not stop automatically. You must manually raise the tone arm and place it back in the rest to stop the turntable from spinning and turn it off.

PITCH ADJUST

The PITCH ADJUST allows you to fine tune the playing speed of the record once the correct speed (33/45/78 RPM) is chosen. Turn the Pitch Adjust Control to slightly increase or decrease the speed of the turntable if necessary.

CASSETTE TAPE OPERATION

  - 1.) Press the POWER button to turn the system "On".
- 2.) Press the FUNCTION button to select the TAPE mode and the display shows "tA".
- 3.) The system will start playback automatically after inserting the cassette tape.
- 4.) Press the VOLUME+/- buttons to adjust volume level as desired.
- 5.) Press the TAPE FAST FORWARD / EJECT button half way when playing, the tape will be advanced forward rapidly.
- 6.) Slightly press the TAPE FAST FORWARD / EJECT button again to resume normal playback. The button will resume to the outermost position.

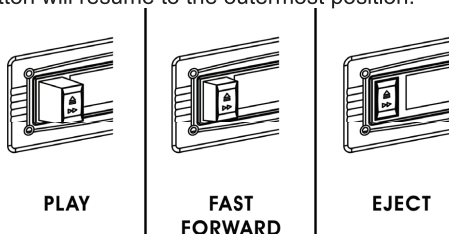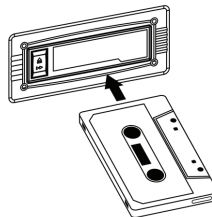

- 7.) Press the TAPE FAST FORWARD / EJECT button completely, then the playing will be stopped and the cassette tape will be ejected.

REMARK:

- Make sure the direction is correct when inserting the tape.
- To avoid damaging the tape, it is recommended to take the cassette tape out of the deck after listening.

PRESET EQ

During playing mode, tap the PRESET EQ button to choose the different sound effect from C (CLASSIC) / r (ROCK) / P (POP) / J (JAZZ) / F (FLAT). You can choose the desired one.

Note: To leave the EQ mode, tap the EQ button to choose F (FLAT).

LINE OUT CONNECTION

You can connect this unit to your external Hi-Fi / AMPLIFIER system by connecting the LINE OUT socket to the auxiliary input socket of your Hi-Fi / AMPLIFIER system with RCA cables (not included).

Note: The Volume control of the main unit will not function when using the LINE OUT.

3.5MM STEREO HEADPHONE JACK

The stereo headphone jack is located on the left front panel. Plug a set of stereo headphones (not included) into this jack for private listening without disturbing others. The speakers are automatically disconnected when headphones are connected to the jack.

IMPORTANT: When using headphones, always set the volume control to a low level before you put the headphone on. Then put the headphone on and gradually increase the volume to a comfortable listening level.

AUXILIARY INPUT

This unit provides an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players and older, non-dockable iPods (except iPod shuffle 3rd gen) so you can listen to your external source through the speakers of this system.

1. Use an audio cable (not included) with one 3.5 mm stereo plug on each end of the cable.
2. Plug one end into the Aux-in jack on the main unit and the other end of the cable into the Line-out Jack or Headphone Jack of your external audio device.
3. Turn on the external audio device.
4. To select auxiliary audio input, Press the FUNCTION button to select the PHONO/AUX mode and the display shows "PH".

Note: Make sure the tone arm of turntable is returned to the rest position before you plan to use AUX IN mode.

5. The volume level can now be controlled through the main unit. Operate all other functions on the auxiliary device as usual.

Note: (1) If the Line Out Jack of your external device is connected, then you only need to adjust the volume control of this system. If the Headphone Jack of your external device is connected, then you may need to adjust both the volume control of your external device and the volume control of this system to find the most desirable volume setting.

- (2) Slide the MODE SWITCH to turn off the system when you finish listening. Don't forget to switch off the power on your external device as well.

CARE AND MAINTAINENCE

1. Do not subject the unit to excessive force, shock, dust or extreme temperatures.
2. Do not tamper with the internal components of the unit.
3. Clean the unit with a dry cloth. Solvents or detergents should never be used.
4. Avoid leaving the unit in direct sunlight or in hot, humid or dusty places.
5. Keep the unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

CASSETTE CARE

Two common causes of trouble experienced when using cassettes are:

- 1) Tape Jamming – Leading to uneven speed in playback, and
- 2) Tape Tangling – Where the tape wraps itself around internal parts of the mechanism.

To reduce the likelihood of these problems occurring, the following precautions should be observed:

- Check that there are no loose layers of tape visible through the cassette center window (see Fig. 1). Take up any loose layers, using a pencil or hexagonal barrelled ballpoint pen, before inserting the cassette into the machine (see Fig.2)
- If the cassette feels tight while performing operation shown (see Fig.2), the tape may be jamming due to ridges formed in the winding of the tape (visible through the center window). These may be removed, in most cases, by fast winding of the cassette from one end to the other and back again.
- Use only well-known brands of tape. Avoid use of C-120 cassettes.

 


Fig.1

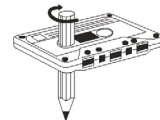 


Fig. 2

 
Furthermore, do not expose cassettes to direct sunlight, dust or oil, and do not touch the tape surfaces.

RECORD CARE AND MAINTAINENCE


To ensure the best sound and the least amount of wear on your records, it's essential that they are kept clean. Make sure your records, especially older ones, are sufficiently cleaned prior to playing them.

Thoroughly clean dust off the stylus and record regularly.

- Use a soft brush to clean the stylus. Brush from the base to the tip as shown below.

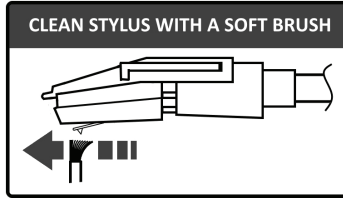

 - For records with only light amounts of dust, we recommend brushing them off with a carbon fiber brush or velvet pad before playing them. Use a good quality record cleaner and brush set to keep your records clean. Carbon fiber brushes, velvet pads and record cleaning kits are available online or in local record stores.

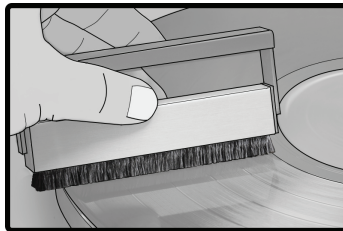

- Using a mild dish soap and warm water for washing your records will also help remove excess dirt and dust that builds up over the years. Use a microfiber cloth when washing and wiping off any excess water from the records once they have been cleaned

NOTE:

Remember, the best cleaning in the world just removes all the dust and dirt. Some records will have scratches and groove wear. No amount of cleaning will fix this. So after cleaning, some records may sound "perfect" and others may not

COMPACT DISC CARE

- Handle the disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the disc.
- Do not attach adhesive tape, stickers etc., to the disc label.
- Clean the disc periodically with soft, lint-free, dry cloth. Never use detergents or adhesive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
- When cleaning the disc, wipe in straight lines from the center of the disc to the edge of the disc. Never wipe in circular motions.
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust and microscopic debris so gently wiping with a soft cloth should remove most particles.



CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture, Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLESHOOTING GUIDE

Symptom	Possible Problem	Solution
The unit does not respond (no power).	AC cord is not plugged into a wall outlet.	Plug the AC cord into a wall outlet.
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.
AM band is too noisy.	The reception at the set location is poor.	Slightly rotate the unit for the best reception.
Sound is distorted.	Volume level is set too high.	Decrease the volume.
	Sound source is distorted.	Try a different audio source such as a music CD.
CD Player does not play.	CD mode is not selected.	Slide the FUNCTION switch to select CD mode.
	CD is not installed or installed incorrectly.	Press the CD onto spindle, printed side facing up.
CD skips while playing.	Disc is dirty or scratched.	Wipe with cloth or another disc.
Unit gets warm after extended play at high volume.	This is normal.	Turn the unit off a period of time or lower volume.

SPECIFICATION

Power Requirement

Main unit:	AC120V~ 60Hz
Remote control	2 x 1.5V "AAA" (UM-4) size batteries (included)

Frequency Range

Radio Band	FM 88 ~ 108 MHz AM 530 ~ 1710 KHz
------------	--------------------------------------

Power Consumption

Main Unit:	18Watts
------------	---------



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for **\$50.00** to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectrainintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL 60634, USA.
1-800-777-5331

To register your product, visit the link on the website below to enter your information.
<http://www.spectrainintl.com/wform.htm>

0221

Printed in China
(JTA-475BPC)