




## AM/FM SHOWER RADIO JWM-130 USER MANUAL

### CAUTION: SPLASH RESISTANT

This unit has been constructed to resist mild steam and light splashes from the shower or bath only. It should never be operated under running water and under no circumstances should it ever be fully immersed in water.

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

### LOCATION OF CONTROLS

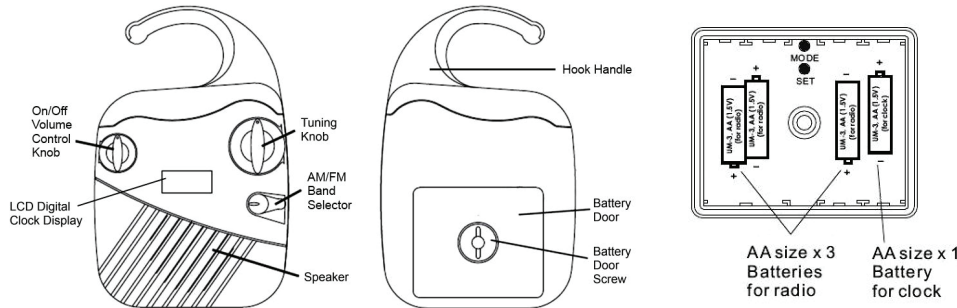

### COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

### POWER SOURCE

This unit requires a total of 4 x 'AA' (UM3) batteries (not included), 3 x 'AA' batteries are for the radio and 1 x 'AA' battery is for the clock.

1. Open the Battery Compartment by rotating the Battery Door Screw counterclockwise until it's loose, and lift off the Battery Door.
  2. Following the polarity diagram (+ and -) as shown inside the battery compartment, insert the 4 x 'AA' size (UM3) batteries.
- Note:** If you need to set the date and time, please proceed to the section below (Setting the Date and Time) prior to replacing the Battery Door (step 3).

3. Put the Battery Door back on the compartment, and rotate the Battery Door Screw clockwise to securely tighten it in place.

### BATTERY NOTE AND CARE:

- Danger of explosion if the battery is replaced incorrectly. Replace only with the same type battery.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- If the unit is not to be used for an extended period of time, remove the batteries. An old or leaking battery can cause damage to the unit and may void the warranty.
- Do not try to recharge batteries not intended to be recharged, they can overheat and rupture. (Follow battery manufacturer's directions.)
- Do not dispose of batteries in fire, batteries may explode or leak.

### SETTING THE DATE AND TIME

**Note:** The buttons for setting the Time and Date are located in the battery compartment on the back of the unit. Please follow the instructions in the section above for removing and reattaching the Battery Door.

1. Press the MODE button to select the alternative time and date displaying mode.

2. Press the MODE button to select the month setting. Press the SET button to change the digits to the correct month.
3. Press the MODE button to select the day setting. Press the SET button to change the digits to the correct day.
4. Press the MODE button to select the hour setting. Press the SET button to change the digits to the correct hour.
5. Press the MODE button to select the minute setting. Press the SET button to change the digits to the correct minute.
6. Press the MODE button to confirm and return to clock mode.

**NOTE:** Press and hold the SET button to advance through the digits faster.

### RADIO RECEPTION

1. Turn on the unit by rotating the On/Off Volume Control clockwise until a "click" is heard.
2. Set the AM/FM Band Selector to "AM" or "FM" for the desired radio band.
3. Turn the Tuning Knob to select the desired radio station.
4. Adjust the Volume Control to obtain the desired sound level.
5. Turn off the unit by rotating the On/Off Volume Control fully counterclockwise until a "click" is heard.

### TIPS FOR BETTER RADIO RECEPTION

1. To insure maximum FM tuner reception, try rotating the unit to obtain the best possible reception.
2. When tuning in AM stations, be sure to place the unit in a vertical position. To insure best AM reception, try repositioning the unit until the best reception is obtained.

### CARE AND MAINTENANCE

1. Clean the unit with a damp cloth. Solvents or detergents should never be used.
2. Avoid leaving the unit in direct sunlight or in hot or dusty places.
3. Keep the unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
4. This unit has rubber seals to minimize the risk of moisture getting inside. However, do not immerse it in water since permanent damage to the electrical and mechanical parts will result.
5. Always wipe the outside of the cabinet thoroughly if it becomes wet with moisture or water splashes. This will help to prevent the internal parts of the unit from entry of water and possible moisture damage.

### SPECIFICATIONS

#### Power Requirement

Radio: DC 4.5V, 3 x "AA" (UM3)  
Clock: DC 1.5V, 1 x "AA" (UM3)

#### Frequency Range

Radio Band: AM: 535 – 1705kHz  
FM: 88 – 108MHz



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling. Please visit us at <http://www.spectrainitl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

### 90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
  - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
  - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
  - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for **\$8.00** to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at [custserv@spectrainitl.com](mailto:custserv@spectrainitl.com) for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.  
4230 North Normandy Avenue, Chicago, IL 60634, USA.  
1-800-777-5331

To register your product, visit the link on the website below to enter your information at <http://www.spectrainitl.com/wform.htm>.

0813

Printed in China