



Portable Stereo Speaker System



USER MANUAL
SMPS-182

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE
OPERATING THIS UNIT AND RETAIN IT FOR FUTURE REFERENCE**

DEAR JENSEN® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.

Customer's Record:

The serial number of this product is found on its back cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: SMPS-182

Serial Number: _____



WARNING

- Do not throw the product into fire to avoid danger of explosion.
- Place the product far away from heat sources, and protect the product from direct sunlight.
- Do not use the product where electric appliances are prohibited.
- Protect the product from violent impact and vibrations.
- No compensation responsibility for malfunctions caused by improper use.
- Do not attempt to disassemble or alter any part of the unit that is not expressly described in this guide. Internal inspections, alternations and repairs should be conducted by qualified service personnel.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Heat

The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.

2. Power Source

The unit should be operated by the power source described in the operating instructions or as marked on the appliance.

3. Cleaning

The unit should be cleaned properly with care.

4. Objects and Liquid Entry

Care should be taken so that objects do not fall and liquids are not spilled into any opening or vents located on the product.

5. Attachments

Do not use attachment not recommended by the product manufacturer.

6. Periods of Nonuse

If the unit is to be left unused for an extended period of time, such as a month or longer, the connecting cord should be unplugged from MP3/iPod to prevent damage or corrosion.

7. Damage Requiring Service

This unit should be serviced by qualified service personnel when:

- A. The audio input cord has been damaged.
- B. Objects have fallen into or fluid has been spilled into the enclosure.
- C. The unit has been exposed to rain.
- D. The unit has been dropped or the enclosure damaged.
- E. The unit exhibits a marked change in performance or does not operate normally.

8. Servicing

The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instruction should be referred to qualified service personnel.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Protect Your Furniture

This product is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

POWER SOURCES

The device can be operated by either battery or AC power.

AC adaptor (Not included)

Input: 120V~ 60Hz

Output: 5V  1200mA

Batteries(Not included)

3 x DC 1.5V "AA" (UM-3)

When both batteries and AC power are used, the unit will automatically use AC adaptor power to conserve the batteries.

Power installation


1. For AC power, insert the AC adaptor (Not Included) plug into DC Jack on the back of speaker.
2. For DC power, remove the battery compartment cover. Insert 3 pieces of "AA" (UM-3) batteries (Not included) with correct direction of polarity as marked inside the compartment. Then replace the compartment cover.

Battery Care

1. Make sure that the batteries are installed correctly. Wrong polarity may damage the unit.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard or rechargeable batteries.
4. Only batteries of the same or equivalent type as recommend are to be used.
5. If the unit is not to be used for an extended period of time, remove the battery.
6. Do not dispose of batteries in fire, batteries may explode or leak.
7. Replace the batteries when the unit stops operating properly.
8. Remove the exhausted batteries from the unit. Please properly dispose of all used batteries responsibly.

LOCATION OF CONTROLS

Rear View

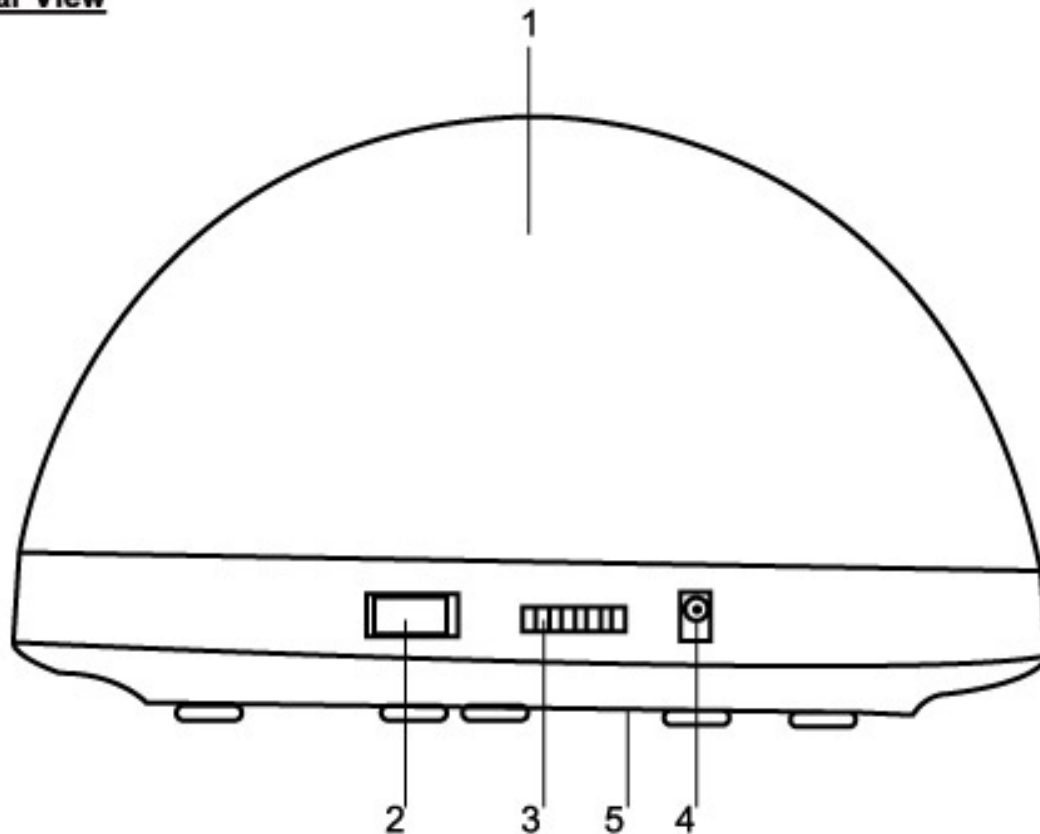

1. Power Indicator
2. Power ON/OFF Switch.
3. Volume Control Knob
4. DC Input Jack
5. Battery Compartment

OPERATION GUIDE

This unit is equipped with a built-in Auxiliary (AUX) Input cable. A wire with 3.5mm audio plug is located in the battery compartment on the bottom of the unit. You can connect your external device to the plug for playing.

1. Place the device you want to play into the well located on the front of the unit. Fully insert the AUX Input plug from the back of the left hand side of the unit into the Headphone Jack of your external audio player like MP3 player, iPod (except iPod shuffle 3rd gen), iPhone, iPad, Kindle Fire, Android tablets and smart phone.
2. Turn the Power ON/OFF Switch to the "ON" position. The Power Indicator will light.
3. Turn on the external audio player and set the volume level to a low setting.
4. Gradually adjust both the output of the attached player and the Speaker System until the desired volume level is reached.
5. Unplug the external device and turn off the Speaker System by sliding the Power ON/OFF Switch to the "OFF" position when you finish listening.

TROUBLESHOOTING GUIDE

Should you experience difficulties in the use of this unit please refer to the following chart or call 1 800 777 5331 for Customer Service.

Problems	Possible Solutions
Unit does not turn on after switching on the power switch.	<ol style="list-style-type: none"> 1. Make sure the batteries are inserted properly with the correct polarity as marked inside the compartment. 2. The batteries may be exhausted. Please change all batteries at the same time.
No sound coming from the Speaker	<ol style="list-style-type: none"> 1. Make sure the volume on the attached player is not set to zero and also check the connection between the audio input jack and the external player. 2. Song files on your player may be corrupted. Please download from your computer again. 3. External player (MP3, iPod or iPhone) is not on. 4. Check and make sure the audio input cord is not damaged.
Sound is distorted.	<ol style="list-style-type: none"> 1. Decrease the volume of the external player. 2. Sound source from your player is distorted. Please download from your computer again.



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

**90 DAY LIMITED WARRANTY AND SERVICE
VALID IN THE U.S.A ONLY**

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicated copy of a sales receipt. You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the owner's manual or non-SPECTRA approved modifications.
 - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA owner's manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the owner's manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE, please remove all batteries (if any) and pack the unit carefully and send it prepaid by insured parcel post or UPS to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so include your name, address, phone number and e-mail address to speed the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for \$8.00 to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid. It is recommended that you contact SPECTRA first at 1-800-777-5331 or by e-mail at info@spectraintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued and SPECTRA reserve the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA.
1-800-777-5331

To register your product, visit the link below on the website to enter your information.
<http://www.spectraintl.com/wform.htm>