

BLUETOOTH ALL-IN-ONE HI-FI MUSIC SYSTEM WITH PA



MODEL : SMPS-750
USER MANUAL



**USB FLASH
DRIVE**
COMPATIBLE



PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS
UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product is enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	---

The Caution Marking is located at the back enclosure of the apparatus.
The Rating plate is located at the back enclosure of the apparatus

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
9. AC adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the AC adapter should be disconnected form the mains socket outlet completely.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for a long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
15. Do not overload wall outlet. Use only power source as indicated.



16. Use replacement part as specified by the manufacturer.
17. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
18. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
19. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation. If the product has been dropped or damaged in any way, and
 - e) When the product exhibits a distinct change in performance - this indicates a need for service.
21. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
22. Excessive sound pressure from earphones and headphone can cause hearing loss
23. Minimum distances of 10 cm around the apparatus for sufficient ventilation.
24. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
25. No naked flame sources, such as lighted candles, should be placed on the apparatus.
26. The use of apparatus in moderate climates.
27. Attention should be drawn to the environmental aspects of battery disposal.

SAVE THESE INSTRUCTIONS

COMPLIANCE WITH FCC REGULATIONS

FCC ID : RSBSMPS-750

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PRECAUTIONS BEFORE USE

- DO NOT CONNECT THE AC ADAPTER TO THE MAINS BEFORE CHECKING THE MAINS VOLTAGE AND UNTIL ALL OTHER CONNECTIONS HAVE BEEN MADE.
- DO NOT COVER ANY VENTS AND MAKE SURE THAT THERE IS A SPACE OF SEVERAL INCHES AROUND THE UNIT FOR VENTILATION.

IMPORTANT NOTES

- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove the battery from the remote control battery compartment, and unplug the AC adapter from the wall outlet. Make it a practice to remove the AC adapter by grasping the plug and not by pulling the cord.
- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- Places subject to constant vibration.
- Dusty, humid or moist places.
- Unplug the unit's AC adapter from the electrical power outlet immediately in case of malfunction.

PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

DEAR JENSEN CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.
- Once you have established a comfortable sound level : Set the dial and leave it there. Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.



Customer's Record:

 
 
The serial number of this product is found on its back cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: SMPS-750

Serial Number: _____


LOCATION OF CONTROLS

MAIN UNIT

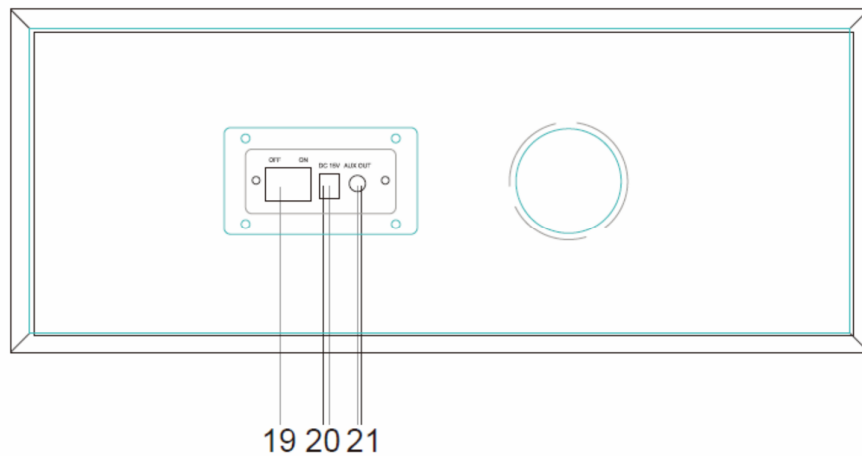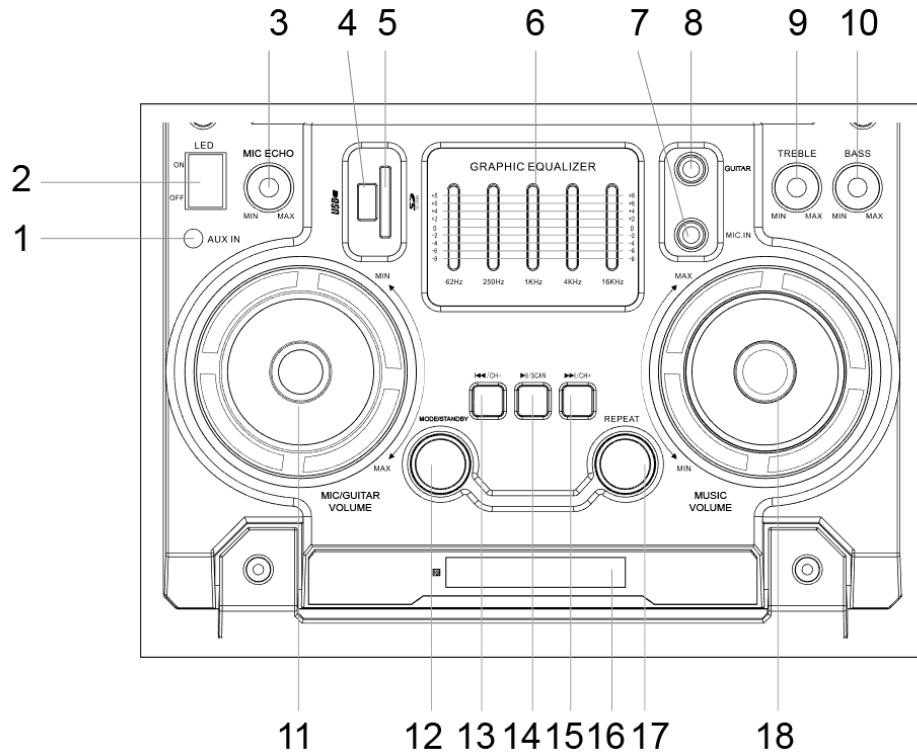

- | | |
|--------------------------|-------------------|
| 1. AUX IN | 12. MODE/STANDBY |
| 2. LED ON/OFF SWITCH | 13. ◀◀ / CH- |
| 3. ECHO CONTROL | 14. ▶▶ / SCAN |
| 4. USB PORT | 15. ▶▶ / CH+ |
| 5. SD CARD SLOT | 16. LED DISPLAY |
| 6. EQ ADJUSTMENT CONTROL | 17. REPEAT |
| 7. MIC IN | 18. MASTER VOLUME |
| 8. GUITAR IN | 19. POWER SWITCH |
| 9. TREBLE CONTROL | 20. DC IN JACK |
| 10. BASS CONTROL | 21. AUX OUT |
| 11. MIC/GUITAR VOLUME | |

 REMOTE CONTROL

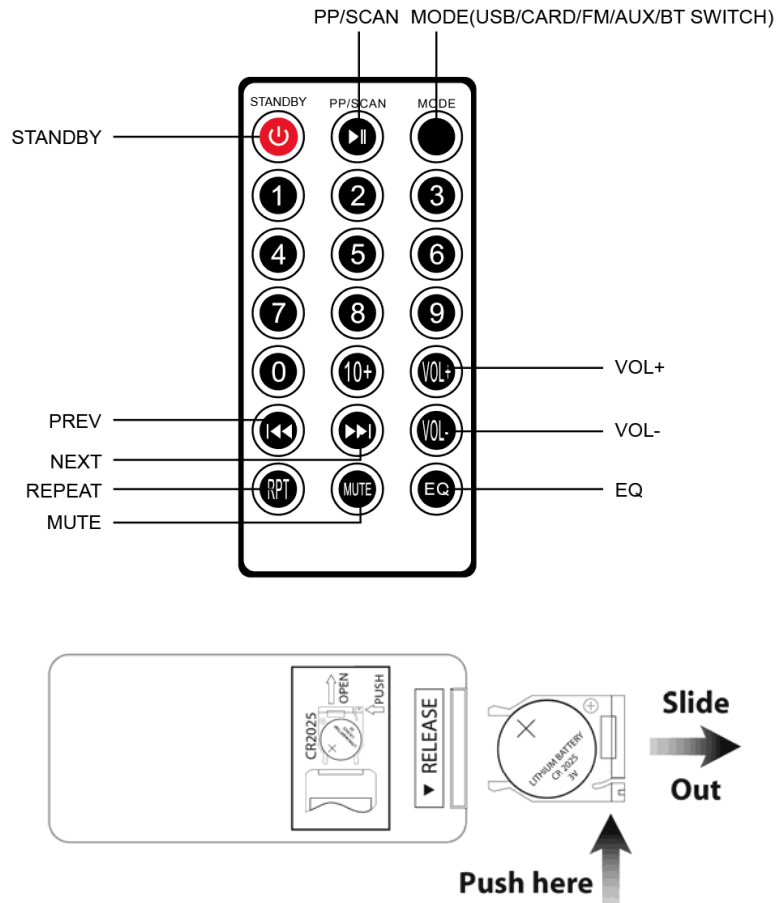

The remote control operates on one CR2025 battery (included). To activate the remote control, remove the insulation tab inserted in the battery compartment. When the operation of the remote control becomes intermittent or unsatisfactory, replace the original battery with a new 3V lithium battery.

1. Press down on the compartment cover, slide out the battery holder from the remote control case.
2. Replace the 3V CR2025 battery. Be sure the battery is installed correctly. The remote will not work if the battery is installed with the wrong polarity.

CAUTION:

1. Danger of explosion if the battery is replaced incorrectly.
2. Replace only with the same or equivalent type battery.

Note: Only use a well-known brand of battery to ensure the longest life and best performance.



WARNING

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CONTROLLING THE VOLUME

This unit features a MASTER VOLUME CONTROL (#18) located on the main unit. The output volume level is initially controlled based on where this control is set.

It's important that if you use the remote control to adjust the volume, make sure the MASTER VOLUME CONTROL (#18) is always set to maximum prior to using the remote control.

Note: If the MASTER VOLUME CONTROL (#18) is set below the maximum volume level, the output volume level will be reduced if you use the remote control. Example: if the MASTER VOLUME CONTROL (#18) is set to 50%, you will only be able to adjust between 0 and 50% of the full volume when using the remote control.

When using the remote control to adjust the volume level, you will notice that the LED display shows V00-V30 as you adjust the volume level. V00 meaning the lowest volume level, and V30 is maximum. Make sure the volume level on the remote control is always left at V30 if you decide to switch to using the MASTER VOLUME CONTROL (#18) instead of the remote control. Leaving the remote control volume level set below V30 will reduce the audio output on the SMPS-750. Turning the POWER SWITCH (#19) OFF and then ON again will reset the volume control setting in the main unit, and restore full use of the MASTER VOLUME CONTROL (#18).

LED DISPLAY

The LED display will show the following codes when that feature is active.

- bt = displays when you are in BLUETOOTH mode
- LInE = displays when you are in AUX mode
- OnE = displays when "Repeat One" is selected during playback
- ALL = displays when "Repeat ALL" is selected during playback
- nOr = displays when "No Repeat" is selected during playback

6 Preset EQ Settings - Only accessible when using the "EQ" button on the remote control

- nOr = displays when "**NORMAL**" EQ setting is selected
- POP = displays when "**POP**" EQ setting is selected
- rOC = displays when "**ROCK**" EQ setting is selected
- JAZ = displays when "**JAZZ**" EQ setting is selected
- CLA = displays when "**CLASSIC**" EQ setting is selected
- Cut = displays when "**COUNTRY**" EQ setting is selected

Note: The preset EQ settings are only available when in Bluetooth or USB/SD modes.

Volume Level – Only shows when using the "VOLUME" buttons on the remote control **V00 to V30**

Note: The volume level range controlled by the remote control is limited by the MASTER VOLUME CONTROL (#18). The MASTER VOLUME CONTROL (#18) should be set around the half way point on the dial before you first power up the unit.

POWER SOURCE

An AC 120V ~ 60Hz power adapter with an output voltage of DC15V 3A is included with the SMPS-750.

POWER CONNECTION

1. Insert the DC plug of the AC adapter into the DC IN Jack (#20) on the unit.
2. Plug the AC adapter into an AC wall outlet.
3. Set the POWER Switch (#19) and the LED Switch (#2) to ON.
4. The SMPS-750 will turn ON, and all the LEDs on the top panel and in the speakers will light.

Note:

Please remove the AC adapter from the wall outlet and unplug it from the SMPS-750 if the unit is not being used for extended periods of time.

CAUTION:

Only use the AC adapter included with the SMPS-750. Using a different adapter could damage the unit and void the warranty.

RADIO OPERATION

The following steps can also be completed using the remote control. Check the remote control diagram for the corresponding buttons.

1. Press the POWER SWITCH (#19) located on the back of the SMPS-750 to turn ON the unit. Press and hold the MODE/STANDBY BUTTON (#12) to wake up the system if necessary.
2. Tap the MODE/STANDBY BUTTON (#12) repeatedly to select FM mode. The frequency will show on the LED DISPLAY (#16).
3. Press the ►►| BUTTON (#15) or |◄◄ BUTTON (#13) repeatedly to manually tune to a desired station.
4. To automatically search for stations with strong signals, press and hold the ►►| BUTTON (#15) or |◄◄ BUTTON (#13) until the frequency read out on display begins to scan then release the button. The tuner will stop on the first strong station signal it finds.
5. Adjust the MASTER VOLUME CONTROL (#18) to the desired sound level.

To set / recall the radio presets

- The unit can automatically search and store the preset memories. Press and hold the PLAY/PAUSE ►|| BUTTON (#14) for 4~5 seconds to activate auto preset mode and the total number of stations can be stored depends on the signal strength of broadcasting stations.
- To recall one of the preset stations already programmed, tap the PLAY/PAUSE ►|| BUTTON (#14) repeatedly until you reach the desired preset number/radio station.

Notes:

- Use manual tuning to select weaker stations that might be skipped or missed during automatic tuning.
- If the automatic tuning does not stop on the exact frequency of the station, for example, it stops on 100.9MHz instead of 100.8MHz, use the manual tuning method to "fine tune" to the exact frequency of the desired station.
- You can also direct enter the frequency by using the remote control. For example, 88.1MHz (enter 881 with remote control), 100.8MHz (enter 1008 with remote control).

TIPS FOR BEST RECEPTION

FM - During FM reception, always keep the FM Wire Antenna fully extended and hanging high up on the wall. If reception is weak, try repositioning the FM Wire Antenna until you find the strongest signal.

BLUETOOTH OPERATION

Pairing a Bluetooth enabled device with the SMPS-750.

1. Turn on the SMPS-750.
2. Tap the MODE BUTTON (#12) repeatedly to select Bluetooth mode. "bt" will appear on the LED DISPLAY (#16) and flash. You will hear four (4) "beeps" confirming you are in pairing mode.
3. Turn on the Bluetooth function of the device you want to link to and enable the search or scan function to find the SMPS-750.
4. Select "SMPS-750" from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) SMPS-750 with your device.
5. If you are pairing (linking) your computer to the speaker using Bluetooth, you may need to set the SMPS-750 as your computer's default sound device.
6. After successfully pairing the SMPS-750 with your Bluetooth device. You will hear two (2) "beeps" confirming that the device is connected.
7. If you want to pair (link) the SMPS-750 with another Bluetooth device, disconnect the connection by using the connected BT device. You will hear a disconnect tone which are three (3) "beeps". Repeat steps 3 & 4. You will hear a confirmation tone to confirm that the new pairing is successful.

Now you can play music from your Bluetooth device wirelessly to the SMPS-750.

1. Select your favorite song, press the Play/Pause on your Bluetooth device or the PLAY/PAUSE ►|| BUTTON (#15) on the SMPS-750 to play or pause the song from your Bluetooth device.
2. Tap the ►| BUTTON (#12) or |◀ LEFT BUTTON (#13) to select the Next or Previous track.
3. Slowly adjust both the volume control of your SMPS-750 and your Bluetooth device until you reach a comfortable listening level.

Notes:

- Refer to the manual of your cell phone, tablet PC, computer or other Bluetooth enabled devices for Bluetooth operation since it may vary from model to model.
- If your Bluetooth enabled device does not support A2DP profile, it will not play the music through the speaker, even if paired (linked).
- Remember to turn off the SMPS-750 when you have finished listening.
- Don't forget to switch off the power of your Bluetooth device as well.
- The repeat function does not apply to the Bluetooth operation.

USB/SD PLAYER OPERATION

The SMPS-750 is compatible with, and will play MP3 files that are stored on a USB flash drive or SD memory card.

1. Press the POWER SWITCH (#19) to turn the unit ON.
2. Plug a USB flash drive into the USB port (#4) or insert a SD CARD into the SD SLOT (#5). The unit will automatically switch modes and begin reading the flash drive or SD card. The total number of tracks will show on the LED DISPLAY (#16).
3. Press the PLAY/PAUSE ►|| BUTTON (#14) to pause the USB or SD card playback, and press again to resume.
4. During PLAY mode, tap the ►►| BUTTON (#15) or |◄◄ BUTTON (#13), the player will go to next or previous track.
5. During PLAY mode, press and hold the ►►| BUTTON (#15) or |◄◄ BUTTON (#13), the player will play fast forward or fast backward.
6. Tap the REPEAT BUTTON on the remote control repeatedly during playback to select repeat ONE, repeat ALL and cancel repeat.

AUX IN OPERATION

You can play other music sources (iPod, MP3 or other digital audio players) through the speakers of the SMPS-750 by connecting the AUX IN Jack (#1) to your external player's audio out jack or headphone jack.

1. Plug one end of an audio cable (not included) into the AUX IN Jack (#1) and the other end of the cable to the headphone jack of your digital audio player.
2. Turn on the SMPS-750 and your external audio device.
3. Press the MODE BUTTON (#12) repeatedly to select the AUX IN mode. "LInE" will light on the LED DISPLAY (#16).
4. The volume level can now be controlled through the main unit. Operate all other functions on the auxiliary device as usual.

Notes:

- If you connect the SMPS-750 to the Line-Out Jack of your external device, you only need to adjust the MASTER VOLUME CONTROL (#18) on your SMPS-750. If you connect to the Headphone Jack of your external device, you may need to adjust both the volume controls of your external device and the SMPS-750 to obtain the desirable listening level.
- Remember to turn off the SMPS-750 when you have finished listening. Don't forget to switch off the power of your external audio device as well.

AUX OUT CONNECTION

You can connect the SMPS-750 to an external Hi-Fi / AMPLIFIER system by connecting the AUX OUT JACK (#21) to the auxiliary input jack on your Hi-Fi / Amplifier system with 3.5mm cable (included).

Now you can adjust both the volume control of your external Hi-Fi / AMPLIFIER system and the MASTER VOLUME CONTROL (#18) of the SMPS-750 to find the most desirable volume setting.

USING THE UNIT AS A PUBLIC ADDRESS SYSTEM

This unit can also be used as a PA (Public Address System).

1. Plug the microphone or guitar (not included) into the MIC IN (#7)/GUITAR IN (#8) jack on the top of the SMPS-750.
2. Turn on the SMPS-750.
3. Turn on your microphone or guitar (not included) and start your performance.
4. Adjust the MASTER VOLUME CONTROL (#18), MIC/GUITAR VOLUME (#11) and ECHO CONTROL (#3) if necessary.

Note: To prevent feedback or loud whistling from occurring, please be sure that the microphone is not held too close to the speakers on the SMPS-750.

RESETTING THE SMPS-750

In case of malfunction due to electrostatic discharge, reset the unit by disconnecting the DC plug of the AC Adapter from its rear DC IN JACK (#20). Wait at least for 3 minutes before reconnecting the DC plug to the DC IN JACK (#20).

CARE AND MAINTENANCE

- Do not subject the unit to excessive force, shock, dust or extreme temperatures.
- Do not tamper the internal components of the unit.
- Clean your unit with a dry cloth. Solvent or detergent should never be used.
- Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
- Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

CAUTION:

Never allow any water or other liquids to get inside the unit while cleaning.

Note: This unit is not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the unit further away from the TV or monitor if unnatural color shifts or image distortion occurs.

TROUBLESHOOTING

If you experience difficulties in the use of this music system, please check the following or call 1-800-777-5331 for Customer Service.

Fault	Possible Causes	Solutions
No sound	<ol style="list-style-type: none"> 1. No input sound source. 2. Volume is too low. 	<ol style="list-style-type: none"> 1. Use a better music signal. 2. Adjust volume.
Distortion of sound	<ol style="list-style-type: none"> 1. Volume too high. 2. The speakers may be damaged. 	<ol style="list-style-type: none"> 1. Turn down the volume. 2. Contact Customer Service for repair instructions.
Karaoke does not work	<ol style="list-style-type: none"> 1. Microphone plug is not fully inserted. 2. Microphone switch is not on. 3. Microphone volume knob is too low. 	<ol style="list-style-type: none"> 1. Plug microphone properly into the socket. 2. Turn on microphone switch. 3. Increase the microphone volume.
MP3 does not play	<ol style="list-style-type: none"> 1. The song format in the flash drive is incompatible. 2. Improper operation has caused a process disorder. 3. Flash drive/SD card are disconnected. 	<ol style="list-style-type: none"> 1. Load MP3 songs into the flash drive or SD card. 2. Turn off the machine and then turn on again. 3. Insert flash drive/SD card properly.

SPECIFICATIONS

Power requirement:

AC adapter:	Input AC 120V ~ 60Hz	
	Output DC 15V \equiv 3A \ominus \oplus	
Main Unit DC input:	DC 15V \equiv 3A \ominus \oplus	
Battery for Remote Control:	1 x 3V CR2025 Lithium Battery	

Frequency Range

Radio Band: FM 87.5 ~ 108 MHz



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Spectra Merchandising International, Inc. is under license. Other trademarks and trade names are those of their respective owners.

90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for **\$60.00** to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectraintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL 60634, USA.
1-800-777-5331

To register your product, visit the link on the website below to enter your information.
<http://www.spectraintl.com/wform.htm>