



©1976, 2013 SANRIO CO., LTD.

## A white Hello Kitty hair dryer is shown against a black background. The dryer has a black Hello Kitty face on the side and the text 'HELLO KITTY' on the front. It features a black power cord and a black nozzle. The controls on the handle include a power switch with 'ON' and 'OFF' markings, a temperature control dial with 'COOL', 'WARM', and 'HOT' settings, and a speed control dial with 'LOW', 'MID', and 'HIGH' settings.

## KT3052

**WARNING:** This is an electric appliance – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it. Not appropriate for use by children 12 years of age and younger.

# WELCOME

Welcome to the world of Hello Kitty. This Hello Kitty hair dryer under license from Sanrio Company Ltd. Read this manual before operating this unit to become familiar with its features and obtain the performance that will bring you continued enjoyment for many years. In the event you require technical assistance, please call 1-800-777-5331.

For future reference, record the serial number in the space provided.

Model Number: KT3052

Serial Number: \_\_\_\_\_

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING

### KEEP AWAY FROM WATER

**DANGER -** As with most electrical appliance, electrical parts are electrically live even when switch is off:

1. Always “unplug it ” immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, “unplug it ” immediately. Do not reach into the water.

 
**WARNING -** To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in .
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operated this appliance if it has a damaged cord or plug, if it is not working properly, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord with appliance.
11. Do not direct hot hair toward eyes or other heat sensitive areas.
12. Attachments may be hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair away from the air inlets.

## SAVE THESE INSTRUCTIONS

# OPERATING INSTRUCTIONS


This appliance is intended for household use. Use on 120V~ 60Hz AC only. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

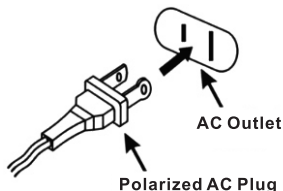

## CHECK ALCI EVERY TIME YOU USE HAIR DRYER

This hair dryer is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water. To make sure the ALCI is functioning properly and the exclusive water sensing system (ALCI) is working, perform the following test.

 1. Plug in hair dryer and turn it on.
2. Press "Test" button on plug. (see diagram below)

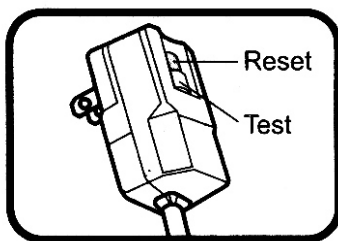

3. Hair dryer will stop working. There will be an audible click and reset button will pop out.
4. To reset ALCI, unplug the dryer, push the "Reset" button back in, and reinsert the plug into the outlet.
5. Be sure to repeat test every time you use hair dryer to confirm ALCI is operational.
6. If ALCI is not functioning properly, return hair dryer to service center.
7. It is important that if immersion occurs, this unit should be delivered to a service center. Do not try to reset.

Should the dryer go off and the reset button pop out during use, this could indicate a malfunction in the dryer. Remove plug from outlet and allow the dryer to cool. Reset the ALCI. Reinsert plug into outlet. Dryer should function normally. If not, return to service center for examination and repair.

# HOW TO GET THE BEST STYLING RESULTS

- 1. Shampoo and rinse your hair thoroughly. If you use a conditioner make sure that no residue of shampoo or conditioner remains in your hair. This will leave your hair looking dull.
- 2. To maximize your hair's natural shine, rinse you hair in cool water.
- 3. Pat your hair gently with a towel, and then rough dry to remove excess moisture.
- 4. Comb your hair with a wide toothed comb or a special de-tangling brush to remove tangles before styling.
- 5. Remember that no hair dryer can correct a bad haircut. A great style begins with a great cut. Visit a qualified hair stylist regularly.

## USING THE DRYER

While your hair is still damp, follow the chart below to select the proper speed and temperature settings for your particular type of hair.

 
### FAN SPEED SWITCH

Switch	Fan speed	Temperature
OFF	OFF	OFF
LOW	SLOW	LOW
HIGH	FAST	HIGH

### COOL SHOT BUTTON

Your hair dryer has a Cool Shot Button to lock in style. When styling your hair, press and hold the Cool Shot Button for a few seconds and the “cool air” flow will lock in your hair setting.

- 1. Air Concentrator
- 2. Cool Shot Button
- 3. Fan Speed Switch
  - HIGH
  - OFF
  - LOW
- 4. Hanger

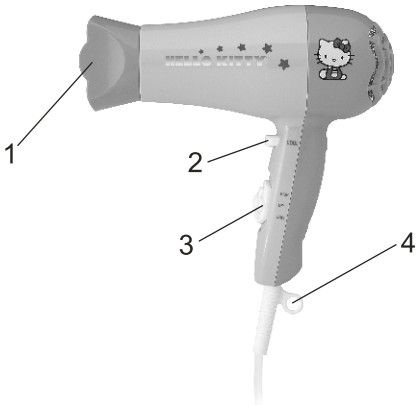

## ATTACHMENT:

**AIR CONCENTRATOR-** Directs airflow accurately for all types of styling. Use with a brush and blow dry in sections. Direct airflow down to the roots of hair for a smooth style, ensuring you do not over dry the ends. The concentrator can be turned 360° to direct the airflow wherever you need it. You may also remove it from the dryer for a wider airflow.

## CAUTION

Never allow the power supply cord to be pulled, twisted, or severely bent.

Never wrap the cord tightly around the dryer. Permanent damage will occur at the high flex point of entry into the hair dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

After prolonged use, the hair dryer can become overheated. The internal protection mechanism of the hair dryer will cut off the heating element and the hot airflow will cease but the fan remains running. This is normal. To resume normal working of the hair dryer, please switch off your hair dryer to allow it to cool down for a few minutes and then switch it on again.

If the cord of the hair dryer is damaged or does not operate properly, return it for repair or replacement. This hair dryer has no user serviceable parts. No repairs should be attempted by the user.

## CARE AND STORAGE

1. Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
3. Regularly clean all the air openings of the unit to ensure a clear airflow so as to prevent overheating.
4. When not in use, your hair dryer should be disconnected and stored in a safe, dry location, out of reach of children.
5. Do not wrap line cord around dryer.
6. Allow the cord to hang or lie loose and straight at the point of entry into the hair dryer.

**IMPORTANT  
MESSAGE  
TO  
CONSUMERS**



THIS MESSAGE ABOUT  
**GROUND FAULT CIRCUIT INTERRUPTERS**  
CAN SAVE A LIFE

**IF YOU MUST USE YOUR HAIR DRYER IN THE  
BATHROOM, INSTALL A GFCI\* NOW!**

Your local electrician can help you decide which type is best for you - a portable unit that plug into the electrical outlet or a permanent unit installed by your electrician. The National Electric Code now requires GFCI's in the bathroom, garages, and outdoor outlets of all new homes.



**WHY DO YOU NEED A GFCI?**  
Electricity and water don't mix. If your hair dryer falls in water while it's plugged in, the electric shock can kill you...even if **the switch is "off."**  
A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

**A GFCI CAN SAVE YOUR LIFE!  
COMPARED TO THAT, THE PRICE IS SMALL!**

**DON'T WAIT...INSTALL ONE NOW!**

\*GFCI(Ground Fault Circuit Interrupter) is a sensitive device with which reacts immediately to a small electric current leak by stopping the electricity flow.

**90 DAY LIMITED WARRANTY AND SERVICE  
VALID IN THE U.S.A. ONLY**

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
  - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
  - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
  - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for **\$10.00** to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at [custserv@spectraintl.com](mailto:custserv@spectraintl.com) for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.  
4230 North Normandy Avenue,  
Chicago, IL 60634, USA.  
1-800-777-5331

To register your product, visit the link below to enter your information.  
<http://www.spectraintl.com/wform.htm>

*Licensed by:*  
*Marino Andriani, LLC*  
*Distributed by:*  
*Spectra Merchandising International, Inc.*  
*Chicago, IL 60634, USA*  
*[www.spectraintl.com](http://www.spectraintl.com)*

0713



**HELLO KITTY®**  
*by Sanrio®*

©1976, 2013 SANRIO CO., LTD.  
Used Under License.  
[www.sanrio.com](http://www.sanrio.com)



SIL- 34037

Printed in China  
(KT3052A)