




★ ★ ★ ★ ★ ★ **HELLO KITTY®** ★ ★ ★ ★ ★ ★

©1976, 2011 SANRIO CO., LTD.

HAIR STRAIGHTENER

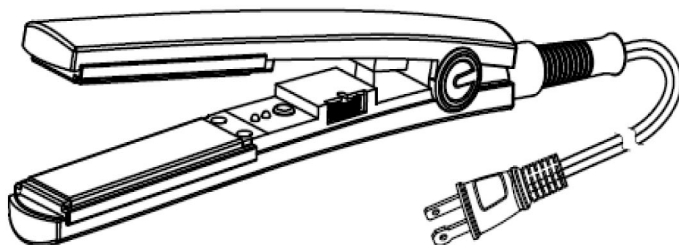

USER MANUAL

KT3057MA

WARNING: This is an electric appliance – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it. Not appropriate for use by children 12 years of age and younger.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER

DANGER- As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:


- 1、 Always “unplug it” immediately after using
- 2、 **DO NOT** use while bathing
- 3、 **DO NOT** use or place or store appliance where it can fall or be pulled into a tub or sink
- 4、 **DO NOT** place in or drop into water or other liquid
- 5、 If an appliance falls into water, “unplug it” immediately, Do not reach into the water

WARNING - To reduce the risk of burns, electrocution, fire or injury to persons:

1. This appliance should never be left unattended when plugged in. Turn off the switch and unplug the electrical cord when not in use.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual.
DO NOT use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. **DO NOT** pull, twist or wrap the cord around the appliance.
6. **Never** use while sleeping.
7. **Never** drop or insert any object into any opening.
8. **DO NOT** use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. This flat iron and its plates are hot when in use. **DO NOT** let eyes and bare skin touch heated surfaces. Use the handle.
10. **DO NOT** use an extension cord with this appliance.
11. **DO NOT** place the heated appliance directly on any surface while it is hot or plugged in.
12. **DO NOT** operate this appliance with a voltage converter.

SAVE THESE INSTRUCTIONS

KNOW YOUR HAIR STRAIGHTENER

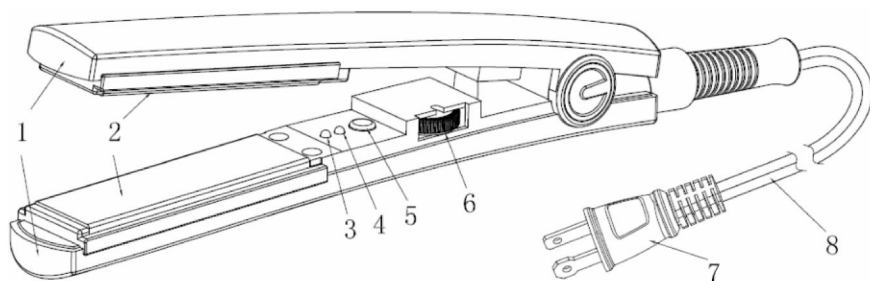

- | | |
|--------------------------|-----------------------------|
| 1. Body | 5. Power Button |
| 2. Heating Plate | 6. Temperature Control Dial |
| 3. Power Indicator | 7. Plug |
| 4. Temperature Indicator | 8. AC Cord |

OPERATING INSTRUCTIONS

This appliance is intended for household use only. The appliance is designed to work on ordinary household voltage AC 120V 60Hz. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician, **DO NOT** attempt to defeat this safety feature.

Start up

Plug the straightener into an electrical outlet and press the POWER Button (#5) to turn the straightener on. The Power and Temperature Indicator will light. The Power indicator will go off when the pre-selected temperature is reached and turn on again when the selected temperature drops and re-heat up starts.

Heating-Up Times

NOTE: The listed heating times below are estimates and can vary, subject to other influences.

Heat Level	Temperature	Estimated Heating Time
1	212°F	1 min. 50 sec.
2	248°F	2 min.
3	302°F	2 min. 15 sec.
4	356°F	3 min.

CAUTION: Flat irons with heat-control dials operate at high temperatures when used on high settings. When using for the first time, begin with the LOWEST setting. Please read all instructions carefully before using.

Straightening Hair

1. Hair should be clean and dried completely before using any styling tool.
2. Comb the hair thoroughly before straightening so that there are no knots in it.
3. To achieve an especially good result, add products designed especially for straightening to your hair.
4. Separate a 2-inch section of hair, gently place between the smoothing plates and clamp the straightener down firmly.
5. Carefully slide the straightener along the isolated section, making sure the hair is heated and straightened all the way to the ends. The ends will probably require less heat than the hair which grows closer to the scalp.
6. For best results, work from the scalp to the ends of your hair and hold end of hair while straightening.
7. To remove hair from the straightener, simply release pressure and allow the hair to gently slip out from the smoothing plates.
8. The straightening process does NOT require overlapping. Separate each section of hair and work on it as indicated above.
9. Allow hair to cool before combing or brushing.
10. Repeat the process until you have achieved the look you desire.
11. When styling is complete unplug the appliance and allow it to cool before storing.

USER MAINTENANCE INSTRUCTIONS

MAINTENANCE

Your appliance is virtually maintenance free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hair spray. If cleaning becomes necessary, unplug the appliance from the power source and wipe the exterior with a damp cloth. If the cord becomes twisted, untwist prior to use.

WARNING: If any malfunction occurs, do not attempt to repair. This appliance has no user-serviceable parts.

STORAGE

When not in use, “unplug it.”

- i. Allow appliance to cool and store out of reach of children in a safe, dry location.
- ii. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break.
- iii. Handle cord carefully for longer life and avoid jerking, bending sharply, twisting, or straining cord, especially at plug connections.

**90 DAY LIMITED WARRANTY AND SERVICE
VALID IN THE U.S.A ONLY**

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for **\$12.00** to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectrainl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA.
1-800-777-5331

To register your product, visit the link below to enter your information.
<http://www.spectrainl.com/wform.htm>

Printed in China