



★ ★ ★ ★ ★ HELLO KITTY® ★ ★ ★ ★ ★
©1976, 2010 SANRIO CO., LTD.

CERAMIC CURLING IRON



USER MANUAL

KT3058M

WARNING: This is an electric appliance – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it. Not appropriate for use by children 12 years of age and younger.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always “unplug it” immediately after using.
2. **DO NOT** use while bathing.
3. **DO NOT** place or store appliance where it can fall or be pulled into a tub or sink.
4. **DO NOT** use near, place in or drop into water or other liquid.
5. If an appliance falls into water, “unplug it” immediately. **DO NOT reach into water.**
6. **DO NOT** use an appliance whose cord has become twisted, bent or otherwise damaged.

WARNING: To reduce the risk of burns, fire, electrocution, or injury to persons:


1. An appliance should never be left unattended when plugged in. Turn off the switch and unplug the electrical cord when not in use.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. **DO NOT** use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it has been working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. **DO NOT** pull, twist or wrap the cord around the appliance.
6. Never use while sleeping.
7. Never drop or insert any object into any opening.
8. **DO NOT** use outdoors or operate where aerosol (spray) products are being used or where oxygen is

being administered.

9. This curling iron and clip are hot when in use. **DO NOT** let eyes and bare skin touch heated surfaces. Use the handle.
10. **DO NOT** use an extension cord with this appliance
11. **DO NOT** place the heated appliance directly on any surface while it is hot or plugged in. Use the stand provided.
12. If you have a dual-voltage appliance, before plugging it in, read the information about dual voltage contained in the “Operation Instructions” section of this manual.
13. Keep the safety stand extended forward while in use.
14. Attachments (when furnished) may be hot during use. Allow them to cool before handling.
15. **DO NOT** operate this appliance with a voltage converter.

SAVE THESE INSTRUCTIONS

KNOW YOUR CURLING IRON

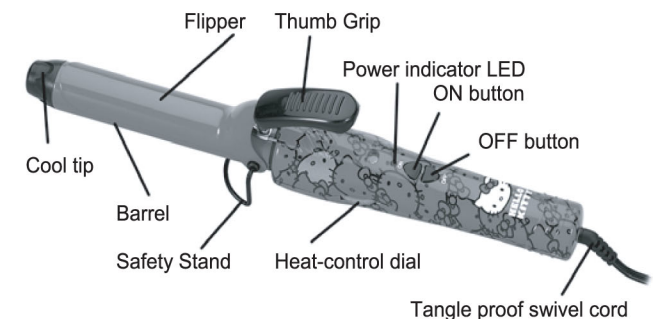

OPERATING INSTRUCTIONS

This appliance is intended for household use only. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact

a qualified electrician. Do not attempt to defeat this safety feature.

Confirm Voltage:

Confirm the voltage available at each overseas location before using the appliance. For connection to a 220-240V~ supply, use an attachment plug adaptor of the proper configuration for the power supply receptacle.

Helpful styling hints

Hair should be clean and dried completely before using any styling tool.

Plug your curling iron into an electrical outlet. Push the "On" button. The Power Indicator LED will illuminate and blink to indicate that the curling iron is heating up. Blinking will stop when curling iron is ready for use.

1. Select the heat level best suited for your hair type. (See the "Heat Control" section.)
2. Separate a 2-inch section of hair and clamp ends to curling iron barrel.
3. Using one hand to hold the cool tip and the other to hold the handle, roll hair under for a curl and over for a flip.
4. Leave in hair for an average of 5 to 8 seconds then slowly unroll.
5. Press thumb grip to release hair.
6. Push the "Off" button and unplug the curling iron after styling is complete.
7. Allow the hair to cool before combing or brushing.

Please note this unit will shut off automatically if left unattended for approximately one hour.

Heat Control: IMPORTANT:

- i. When using the curling iron for the first time, select the LOWEST heat setting and test in one small section of hair for 5 to 8 seconds.
- ii. If you want to use a higher setting, be sure to GRADUALLY increase the temperature. Never style hair for the first time on a high setting as this may damage your hair.
- iii. Use only as much heat as you need for effective curling. Over time, using more heat than is necessary can result in hair damage.

USER MAINTENANCE INSTRUCTIONS

MAINTENANCE

Your appliance is virtually maintenance free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hair spray. If cleaning becomes necessary, unplug the appliance from the power source and wipe the exterior with a damp cloth. If the cord becomes twisted, untwist prior to use.

WARNING: If any malfunction occurs, do not attempt to repair. This appliance has no user-serviceable parts.

STORAGE

When not in use, "unplug it."

1. Allow appliance to cool and store out of reach of children in a safe, dry location.
2. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break.
3. Handle cord carefully for longer life and avoid jerking, bending sharply, twisting, or straining cord, especially at plug connections.

90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.

- b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.

- c. Claims are made within the warranty period.

2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for \$12.00 to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectraintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA.
1-800-777-5331

To register your product, visit the link below to enter your information.
<http://www.spectraintl.com/wform.htm>

Printed in China

MAK10316