

★ ★ ★ ★ ★ **HELLO KITTY** ★ ★ ★ ★ ★

© 1976, 2012 SANRIO CO., LTD.

MOOD LAMP



USER MANUAL KT3090

THIS IS NOT A TOY –

Keep out of reach of children and animals!

PLEASE READ THIS INSTRUCTION MANUAL

COMPLETELY BEFORE OPERATING THIS UNIT AND

RETAIN THIS BOOKLET FOR FUTURE REFERENCE

WELCOME

We have taken great care to make sure that your Hello Kitty Mood Lamp was in perfect working order when it left our factory. It has been designed to give you many years of enjoyment and trouble free operation. Read this manual before operating this unit to become familiar with its features and obtain the performance that will bring you continued enjoyment for many years.

For future reference, record the serial number in the space provided.

Model Number: KT3090

Serial Number: _____

CONTENTS

Your set should include the following:

- 1 x Hello Kitty Mood Lamp
- 1 x user manual

POWER SOURCE

The unit operates either on 3 “AAA” (UM-4) batteries (not included) or an external AC adaptor (not included) rated at 5V \pm 300mA. When the AC adaptor is connected, battery power shuts off automatically for safety, and to help reduce drain.

INSTALLING AND CHANGING BATTERIES

Before use, unscrew and remove the Battery Compartment Cover at the bottom of the unit and insert 3 “AAA”(UM-4) batteries (not included), following the “+” and “-” polarity markings inside the battery compartment when loading.

When the light intensity of the lamp gets dim, change the batteries as follows:

1. Unscrew and remove the Battery Compartment Cover.
2. Replace all the exhausted batteries with three new ones following the “+” and “-” polarity markings inside the battery compartment when loading.



CAUTION


1. Be sure that the batteries are installed correctly according to the polarity diagram on the rating label. Wrong polarity may damage the unit.
2. For better performance and longer operating time, we recommend the use of good quality alkaline batteries.
3. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
4. To avoid damage caused by leakage of the battery fluid, replace batteries once every 12 months. Old batteries can cause damage to the unit and will void the warranty.
5. Remove all batteries when not in use for some time.
6. Do not dispose of batteries in fire, batteries may explode or leak.

USING AN EXTERNAL AC ADAPTOR

For prolonged operation, you may attach an external AC adaptor (not included) to the DC Jack at the bottom of the unit to save battery power.


1. Insert the DC plug of your AC adaptor (not included) into the DC Jack at the bottom of the lamp.
2. Plug the AC adaptor into a 230V~ 50Hz AC power outlet.

NOTE: Use only an AC adaptor with an output voltage of 5V \pm 300mA, or higher, with a female center-positive plug as shown below:

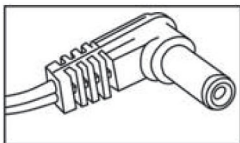

If you are using a universal adaptor with an output polarity switch, or polarized plugs, be sure to set the polarity to "+".

OPERATION

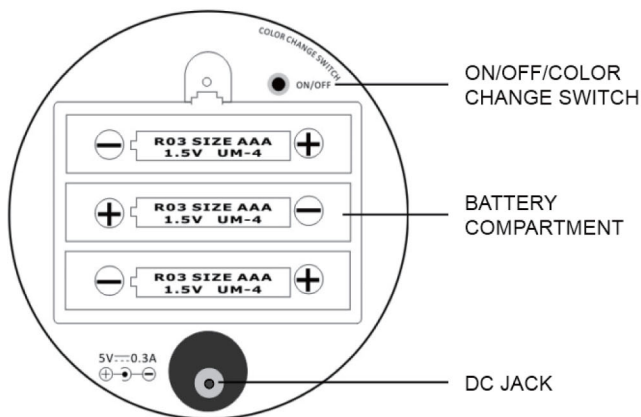

1. Press and hold the On/Off/Color Change switch for about 4 seconds to turn the light on.
2. Press again slowly to go through the programmed color sequence to select auto (gradual color change), green, blue, red, purple, white or flash (rapid color change). Stop pushing down when you have made your choice.
3. To turn the mood light off, press the On/Off button down for about 4 seconds.

CARE AND MAINTENANCE

1. For cleaning: use only a soft cloth. Never use alcohol or chemical solvents.
2. To reduce the risk of electric shock, do not remove cover and touch electrical parts inside.
3. Do not place unit in direct sunlight, in humid or dusty area, or in hot environment.
4. This product is for indoor use only. Do not expose to rain or moisture.

SPECIFICATIONS

Power requirements:

Batteries : 3 "AAA" (UM-4) alkaline batteries

OR

External AC adaptor : 5V $\overline{\text{---}}$ 300mA or higher, female center-positive plug

www.mseaccessories.com

Producer:

Charming Home Décor Corp.



0712

Printed in China