



HELLO KITTY

© 1976, 2012 SANRIO CO., LTD.

LIQUID MOTION GLOW LAMP



USER MANUAL
KT3197

WARNING:

This is an electric appliance - not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.

WARNING

TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

1. Read all instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments / accessories specified by the manufacturer.
11. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. This apparatus shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.



15. The main AC plug is used as a disconnect device and it should remain readily accessible during use. In order to disconnect the apparatus, the main AC plug should be disconnected from the AC outlet completely.

 
⚠ WARNING
THIS IS A DECORATIVE FURNISHING. NOT A TOY!

UK MAINS PLUG DETAILS

For your convenience, a mains plug with a fuse (3 Amperes) has been fitted to this appliance. For your safety please observe the following information. The appliance is designed to operate on 230 volts, 50 Hz AC mains supply. The wires in the mains lead are coloured in accordance with the following code:



Colour Code	Plug Lead
BLUE	NEUTRAL
BROWN	LIVE

CAUTION: Under no circumstances should the Neutral or Live wires be connected to the 'E' (Earth) terminal.

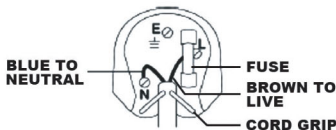

ASSEMBLY AND OPERATING INSTRUCTIONS

  - ♦ Carefully unpack the unit from the box.
- ♦ Assemble the unit on a flat and clean surface.
- ♦ Re-center the bulb if necessary. It is important that the bulb in the unit's base be completely centered and tightened. The bulb and socket might have been slightly moved during shipping. If so, gently push the socket with your fingers to re-center it. Make sure that the unit is unplugged before touching it.
- ♦ Position the body (B) on the base (A) and make sure it is steady.
- ♦ Place the cap (C) on top of the bottle to complete.
- ♦ Insert the polarized power plug into a household power outlet and turn on the unit with the inline Power Switch.
- ♦ Use only 15W type R39 frosted bulb for replacement. Incorrect bulb size or wattage will result in unsatisfactory operation, fire or breakage of the glass vessel.
- ♦ The unit is designed to operate in an average room temperature 20-25C° (68-77°F). Make sure the unit is at room temperature before starting.
- ♦ The unit operates best at room temperatures between 20-25C° (68-77°F).



CONTENTS OF SEALED GLASS VESSEL

1. Distilled Water
2. Wax

CAUTION



- ◆ Use only 15W type R39 appliance bulb for replacement bulb. Variance in bulb size or wattage will result in unsatisfactory operation, fire or breakage of the glass vessel.
- ◆ The vessel and base will be warm to the touch in operation and for a while after the unit has been turned off or unplugged.
- ◆ Always operate the unit on a firm stationary surface that is at room temperature.
- ◆ Do not operate the unit on any warm or hot surfaces. Operate the unit only in room temperature.
- ◆ When the unit is in operation, be sure not to move or shake it to avoid liquid becoming murky and permanently damaged.
- ◆ The unit should never be heated up by any other means nor should it be cooled down forcibly.
- ◆ The space on the top of the vessel is provided for expansion. Do not break the seal of cap to fill it with liquid or solid. Breaking the seal will void your warranty and ruin the product.
- ◆ If the external flexible power cord of this unit is damaged, it must be exclusively replaced by the manufacturer or service agent or a similar qualified person in order to avoid a hazard.
- ◆ Do not place near sources of heat or cold such as heating and air conditioning vents.
- ◆ Operation or storage of the unit under direct sunlight will cause colors to fade.
- ◆ Keep the unit out of reach of small children and pets.
- ◆ The vessel is made of glass. Do not use when the vessel is cracked or damaged.
- ◆ Use only fine glass cleaner and a soft cloth to clean the surface. Always unplug it before cleaning.

TECHNICAL INFORMATION

Input Voltage	: 230V~ 50Hz
Power Consumption	: 15W
Type of Light Bulb	: R39 E14, 240V~ 15W (Max.)
Fuse	: 3A (Fitted inside AC Plug)

