 


Hello Kitty®

©1976, 2007 Sanrio Co., Ltd.

## POPCORN MAKER

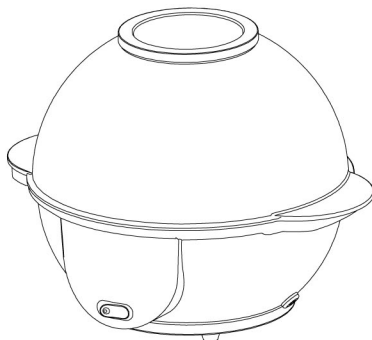

## OWNER'S MANUAL

KT5230E

### CAUTION

To prevent burns, personal injury or property damage, read and follow all instructions and warnings.



- Do not touch hot surfaces. Use handles for lifting or carrying.
- Do not move an appliance containing hot oil or other hot liquids.
- This popcorn popper will not shut off automatically. To avoid overheating, add corn and oil before operating.
- Do not use this appliance on the stovetop, under the broiler, in the freezer, or in the oven.
- Extreme caution must be used when unloading popcorn. Always turn the unit away from you and over a countertop so that residual hot oil or water running out will not cause burns.

**FOR USE AS A HOUSEHOLD APPLIANCE**

**THIS IS NOT A TOY**

## SAFETY FIRST

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating this appliance.
2. To protect against risk of electrical shock do not put cords, plug, or base unit in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors or anywhere the cord or motor body might come in contact with water while in use.
9. Do not use the appliance for anything other than its intended use.
10. To avoid the possibility of the appliance being accidentally pulled off work area, which could result in damage to the popcorn maker or personal injury do not let cord hang over edge of table or counter.
11. To avoid damage to cord and possible fire or electrocution hazard, do not let cord contact hot surfaces, including stove.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Do not touch the hot surface. Use handles or knobs.
14. Make sure the popper cover is in place while operating.
15. Do not touch base while operating – this gets very hot. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
16. During operation do not touch the steam hole on the top of cover. The hot steam may result in a burn. Never cover the steam hole with towel or similar objects.
17. Extreme caution must be used when moving this appliance containing.
18. Never leave the appliance unattended while in operation or while plugged in.
19. To avoid accidental burns, extreme caution must be used when unloading the popped popcorn. Always work over a counter-top so any residual hot oil or steam that might come out does not come in contact with any part of your body.

20. This popper does not shut off automatically. To avoid overheating, add corn and oil before operating. It is not necessary to have pre-heating.  
21. Do not use the appliance for other than its intended use.

## **WARNING**

### **THIS IS A POPCORN MAKER. NOT A TOY**


TO REDUCE THE RISK OF PERSONAL INJURY AND ELECTRIC SHOCK, IT SHOULD NOT BE PLAYED WITH OR PLACED WHERE SMALL CHILDREN CAN REACH IT.

**This popper does not shut off automatically. Never leave it unattended when plugged in or turned on.**

## **SAVE THESE INSTRUCTIONS**

### **FOR HOUSEHOLD USE ONLY**

#### **FUNCTIONS AND CONTROLS**

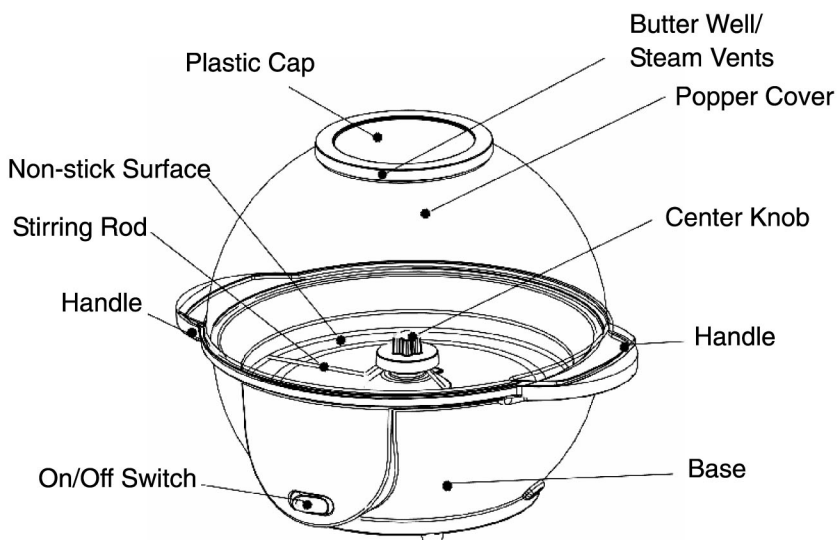

## BEFORE FIRST USE


Wash the unit popper cover and plastic cap in hot soapy water and a sponge or dishcloth. Rinse thoroughly and dry. To clean stirring rod and non-stick surface of base, remove the stirring rod from base by unscrewing the center knob. Wipe both the surfaces with a damp cloth and dry. Replace the stirring rod and make sure it fits in place properly. Your corn popper is now ready for use.

## HOW TO USE

1. Place the popper base on flat, level, dry surface.
2. Pour 1½ tablespoons of vegetable oil and ½ a cup of popping corn into popper base. This will yield 2-3 quarts of popped corn. Do not add more popping corn or oil than recommended. Spread the corn and oil evenly over the non-stick surface.
3. Do not substitute butter, margarine, shortening or lard for vegetable oil as these will burn or smoke excessively.
4. Place popper cover on the base making sure the handles of cover fit into handles of popper base.
5. Remove the plastic cap on the top of the cover.
6. Add 1½ tablespoons of butter (or margarine) into the butter well (optional).
7. Plug the popper into a power outlet and turn the switch “on”. The popper will turn on and the stirring rod will begin turn.
8. The typical popping time will be about 3½-4 minutes for a ½ cup of popping corn.

**Caution:** Preheating is not necessary before popping. Do not touch the popping cover or base during operation.

9. Turn off the popper as soon as the popping begins to slow down (after about 3½ minutes) and unplug cord from wall outlet. You will now need to quickly turn the popper over as soon as possible to prevent the popcorn from burning.
10. When the popping cycle is completed, turn the power switch “off” and unplug cord from wall outlet.
11. Securely replace the plastic cap on the popper cover.
12. Firmly grasp the handles and completely turn the popper base and cover over in one smooth motion away from your body. The popped popcorn will fall into the popper cover.
13. Lift the popper base away from the cover, being careful of the escaping steam.
14. The Popcorn is now ready for serving. Sprinkle the popcorn with salt, if desired.
15. If you plan to pop more corn immediately, transfer the popcorn into a serving bowl and follow steps 1 through 11 above.

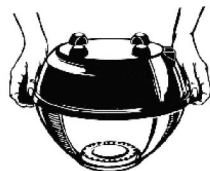

**Note:** The max operation time should not exceed 20 minutes and minimum 20 minutes cool down period must be maintained between two consecutive popping cycles.

## CLEANING AND MAINTENANCE

1. Your corn popper should be cleaned after each use. Always allow popper to cool completely before cleaning.
2. Clean the non-stick surface and base by wiping with a damp soapy dishcloth or sponge. Wipe the surfaces with a damp cloth and dry. Do not use abrasive pads or powders on the non-stick finish as scratching can occur.

**Caution:** Never immerse the base in water or other liquid for cleaning.

3. Remove the stirring rod from base by unscrewing the center knob. Rinse the stirring rod, plastic cap, popper cover and center knob in hot soapy water, rinse thoroughly and dry. Replace the stirring rod, after cleaning base, making sure it fits in place properly.
4. Replace all the parts after they are completely dried.

**Note:** After frequent use, the non-stick surface may discolor. To remove this discoloration, use a soft cloth saturated with lemon juice or vinegar and completely rub the surface. Wipe the surface with a damp cloth and dry.

## TECHNICAL INFORMATION

Input Voltage: AC 220-240V~ 50Hz  
Power Consumption: 750 W (Max.)

Producer:  
Xin Bao



Printed in China