



**WALL MOUNTABLE 2.1 CHANNEL BLUETOOTH
SOUNDBAR SPEAKER WITH BUILT-IN SUBWOOFER**



USER MANUAL
JSBW-750



**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING
THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The Caution Marking is located at the bottom of the apparatus.

The Rating plate is located at the bottom enclosure of the apparatus

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for a long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.




16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement part as specified by the manufacturer.
18. The product may be mounted to a wall only if recommended by the manufacturer.
19. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
20. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
21. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
22. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
23. Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
24. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
25. Excessive sound pressure from earphones and headphone can cause hearing loss.

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



CAUTION:
 TO PREVENT ELECTRIC SHOCK, MATCH WIDE
 BLADE OF AC PLUG TO WIDE SLOT. FULLY INSERT.

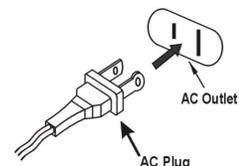

**SAVE THESE
 INSTRUCTIONS**

COMPLIANCE WITH FCC REGULATIONS

FCC ID OG5MW1481

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PROTECT YOUR FURNITURE

This system is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture.

To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

DEAR JENSEN® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.
- Once you have established a comfortable sound level: Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.




Customer's Record:

The serial number of this product is found on its bottom cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number : JSBW-750


Serial Number :

LOCATION OF CONTROLS

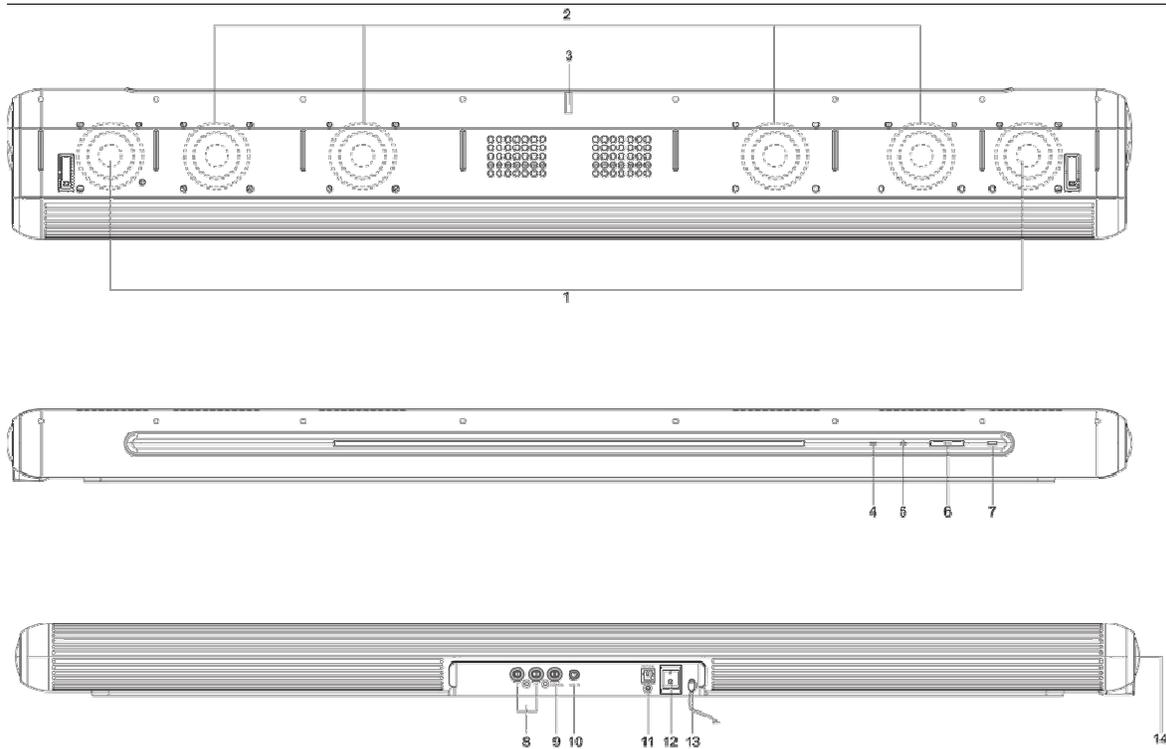

1	MID-HIGH RANGE SPEAKERS	8	RCA LINE-IN JACKS
2	WOOFER SPEAKERS	9	RCA COAXIAL JACK
3	REMOTE CONTROL SENSOR	10	AUX-IN JACK
4	- (volume down)	11	OPTICAL-IN JACK
5	+ (volume up)	12	MAIN POWER ON/OFF SWITCH
6	⏻ ↻ STANDBY/MODE BUTTON	13	POWER CORD
7	STATUS INDICATOR	14	USB JACK (for 1A USB charging)
	RED = STANDBY		
	BLUE = BLUETOOTH MODE		
	LIGHT BLUE = OPTICAL INPUT MODE		
	PINK = COAXIAL INPUT MODE		
	GREEN = AUX/RCA INPUT MODE		

REMOTE CONTROL

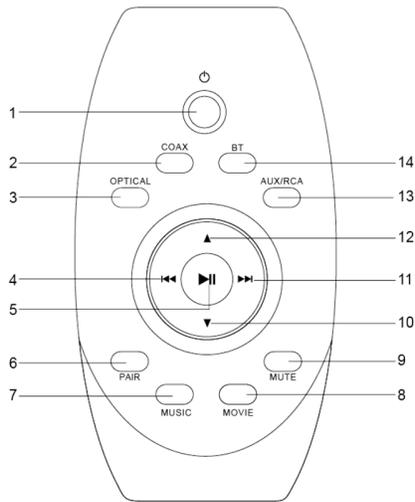

1		8	MOVIE
2	COAX	9	MUTE
3	OPTICAL	10	▼
4		11	
5		12	▲
6	PAIR	13	AUX/RCA
7	MUSIC	14	BT

Remove the protective tab to activate remote


The Remote Control has a pre-installed lithium CR2032 battery. Remove the protective tab to activate the remote control.

Battery Installation

1. Use a screwdriver to remove the screw (#A).
2. Remove the battery compartment cover (#B).
3. Place the battery into the battery compartment.
4. Make sure that the side marked with + is facing up.
5. Replace the battery compartment cover (#B).
6. Use a screwdriver to secure the screw (#A).

Note :

1. If the remote control does not work properly, replace the battery.

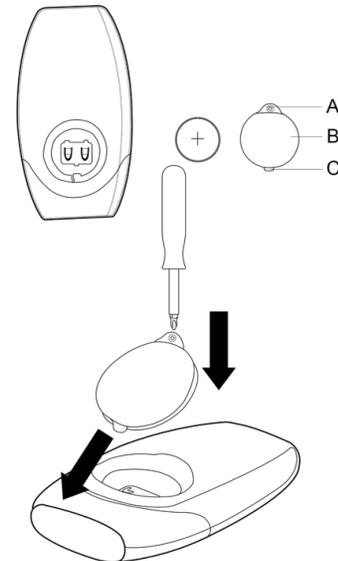

WARNING : DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.


Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

BATTERY WARNING

1. Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.
2. Use only the size and type of batteries specified.
3. If the unit is not to be used for an extended period of time, remove the batteries. Old or leaking batteries can cause damage to the unit and may void the warranty.
4. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions).
5. Do not dispose of batteries in fire, batteries may leak or explode.

CONNECTION

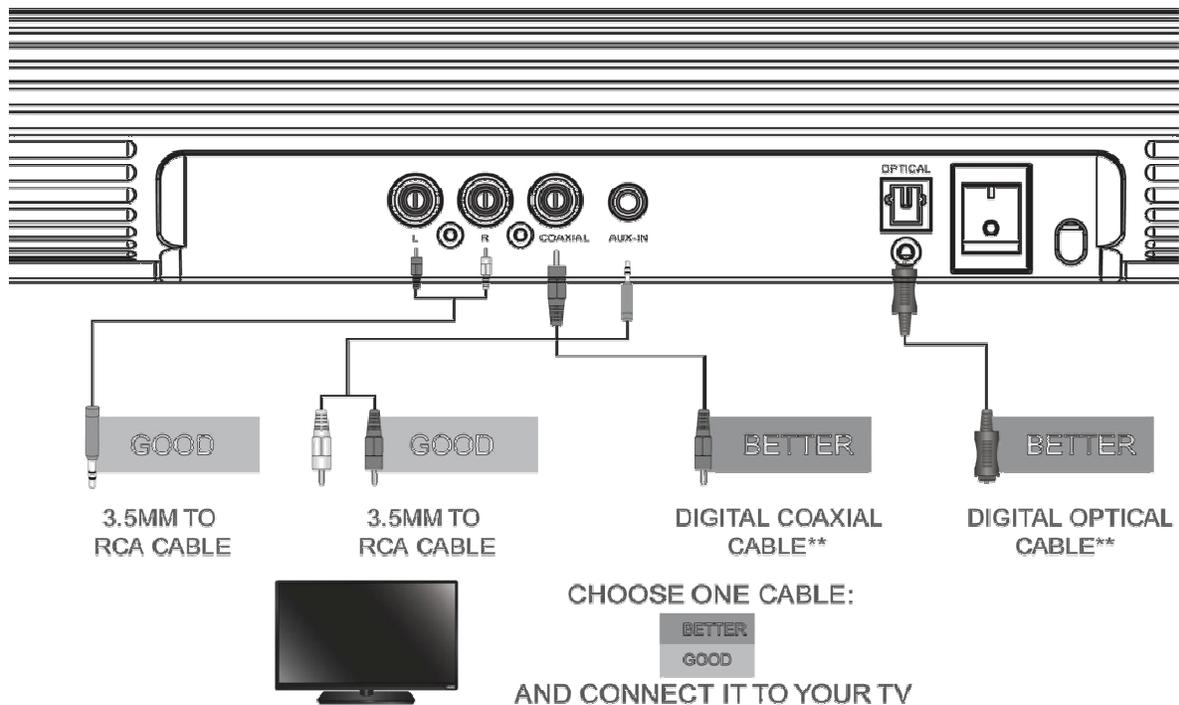

*Not all TVs have the audio outputs shown above. Check the user manual from your TV to determine which connection is best for your TV.

To connect the Sound Bar directly to other devices (Blu-ray player, game systems, etc), check the device's user manual to determine the best connection to use.

**When using either of the Digital Inputs, if the status indicator light is flashing quickly:


- (A) Ensure that the Optical cable or Coaxial cable is properly connected;
- (B) Try setting the TV output to PCM; or
- (C) Connect directly to your Blu-ray/other source, some TVs do not pass through digital audio.

NOTE: Digital connection cables (coaxial and optical) are not included.

CONNECTING THE POWER

Risk of product damage !

- Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the AC power cord (#13), ensure you have completed all other connections.
- Connect the mains plug of the main unit to a mains socket.
- Ensure all connections are connected before connecting to the mains power socket.

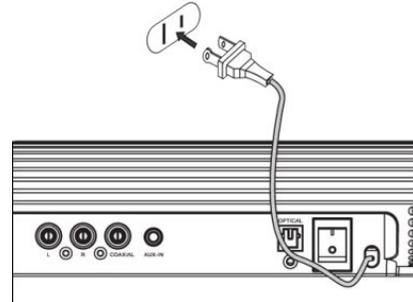

GETTING STARTED

- Press the MAIN POWER ON/OFF SWITCH (#12) on the back of the JSBW-750 to the ON position, the main unit will enter standby mode, and the STATUS INDICATOR (#7) will light up red.
- Press the  STANDBY/MODE BUTTON (#6) on the main unit or the  BUTTON (#1) on the remote control to turn the JSBW-750 on. The STATUS INDICATOR (#7) will change from red to the color associated with the last mode the JSBW-750 was operating in. Blue=Bluetooth mode, Light Blue=Optical input mode, Pink=Coaxial input mode or Green=AUX/RCA input mode.
- Press and hold the  STANDBY/MODE BUTTON (#6) on the main unit or press the  BUTTON (#1) on the remote control to switch the main unit back to Standby mode. The STATUS INDICATOR (#7) will change to red.
- Set the MAIN POWER ON/OFF SWITCH (#12) to the OFF position if you want to turn off the JSBW-750 completely.

Note : When the JSBW-750 is sitting idle, and no input signals are being received for 60 minutes, the unit will automatically switch to Standby mode.

Selecting Operation Modes

Using the remote control, press the audio source buttons BT (#14), OPTICAL (#3), COAX (#2) or AUX/RCA (#13) to change to that mode directly.

You can also tap the  STANDBY/MODE BUTTON (#6) on the main unit repeatedly (power on) to switch between the different operating modes. The STATUS INDICATOR (#7) will light in different colors indicating the mode you are in.

- Blue = Bluetooth mode
- Light Blue = Optical input mode
- Pink = Coaxial input mode
- Green = AUX/RCA input mode

BLUETOOTH OPERATION

Pairing a Bluetooth enabled device with the JSBW-750.

1. Turn on the JSBW-750 and select BT mode. The STATUS INDICATOR (#7) will light up Blue and begin flashing.
2. The JSBW-750 will automatically go into Pairing/Discoverable mode.
3. Turn on the Bluetooth function for the device you want to link to, and enable the search or scan function to find the JSBW-750.
4. Select "JSBW-750" from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) JSBW-750 with your device.
5. If you are pairing (linking) your computer to the speaker using Bluetooth, you may need to set the JSBW-750 as your computer's default sound device.
6. After successfully pairing the JSBW-750 with your Bluetooth device, The STATUS INDICATOR (#7) will stop flashing and remain lit Blue.
7. If you want to pair (link) the JSBW-750 with another Bluetooth device, press and hold the PAIR BUTTON (#6) on the remote a few seconds. The STATUS INDICATOR (#7) will begin flashing Blue. The JSBW-750 will go into Pairing/Discoverable mode. Repeat steps 3 & 4.

Now you can play music from your Bluetooth device wirelessly to the JSBW-750.

1. Select your favorite song, press the Play/Pause on your Bluetooth device or the Play/Pause ►|| BUTTON (#5) on the JSBW-750 remote control to play or pause the song from your Bluetooth device.
2. Press the Skip Forward ►►| BUTTON (#11) or Skip Backward |◄◄ BUTTON (#4) on the remote control to select the Next or Previous track.
3. Press "▲" / "▼" BUTTON (#12/10) on remote control or tap the "+" / "-" BUTTON (#5/4) on the main unit and adjust the volume control of your Bluetooth device until you reach a comfortable listening level.

Note :

1. Refer to the manual of your cell phone, tablet PC, computer or other Bluetooth enabled devices for Bluetooth operation since it may vary from model to model.
2. If your Bluetooth enabled device does not support A2DP profile, it will not play the music through the speaker, even if paired (linked).
3. Remember to turn off the JSBW-750 when you have finished listening,
4. Don't forget to switch off the power of your Bluetooth device as well.
5. The music playback will automatically be paused when you have an incoming call. When the call is ended, the JSBW-750 will start playing again.

OPTICAL/COAXIAL (DIGITAL INPUTS) OPERATION

NOTE: Digital Cables (Optical / Coaxial) are not included.

1. Ensure that the connections to the JSBW-750 are securely attached to the TV or other audio device via Optical or Coaxial cables (not included).
2. Turn on the JSBW-750, repeatedly press the  STANDBY/MODE BUTTON (#6) on the main unit or press the OPTICAL BUTTON (#3) or COAX BUTTON (#2) on the remote control to select the appropriate OPTICAL or COAXIAL mode.
3. Operate your connected audio device directly for playback features.
4. Press the “▲” / “▼” BUTTON (#12/10) on remote control or tap the “+”/ “-” BUTTON (#5/4) on the main unit to adjust the audio level.

NOTE : If no sound is heard from the JSBW-750, and the status indicator light is rapidly flashing, Make sure the audio (digital output) setting of your source player (e.g. TV, DVD player, game player) is set to PCM.

AUX/RCA OPERATION

1. Ensure that the connections to the JSBW-750 are securely attached to the TV or other audio device via the included 3.5mm-RCA cable.
2. Turn on the JSBW-750, press the  STANDBY/MODE BUTTON (#6) on the main unit repeatedly or press the AUX/RCA BUTTON (#13) on remote control to select the AUX/RCA input mode.
3. Operate your connected audio device directly for playback features.
4. Press the “▲” / “▼” BUTTON (#12/10) on remote control or tap the “+”/ “-” BUTTON (#5/4) on the main unit to adjust the audio level.

Note:

- When using the RCA LINE-IN JACKS (#8), make sure the AUX-IN JACK is unplugged.
- If you connect the JSBW-750 to the Line-Out Jack of your external device, you only need to adjust the volume control of your JSBW-750. If you connect to the headphone jack of your external device, you may need to adjust both the volume controls of your external device and the JSBW-750 to obtain the desirable listening level.
- Remember to turn off the JSBW-750 when you have finished listening. Don't forget to switch off the power of your external audio device as well.

Power Saver Mode

If the JSBW-750 is sitting idle, and no input signals are being received for 60 minutes, the unit will automatically switch to Standby mode to save energy.

NOTE:

Please note that a low volume setting from the audio source may be recognized as “no audio signal”: this will affect the capability of signal detection from the device and can also originate an automatic switch into standby mode. If this happens please reactivate the audio signal transmission or increase the volume setting on the audio source player (MP3 player, etc.), in order to resume playback. Please contact the local service center if the problem remains.

USB CHARGING PORT

This unit features a USB JACK (for 1A USB charging) (#14) your portable device (iPod, iPhone, Android phone, etc.) when used with the USB charging cord that came with your device.

1. Plug one end of the USB cable (not included) into the USB JACK (for 1A USB charging) (#14) located on the side of the unit. Plug the other end of the cord into the device you wish to charge.
2. Observe the battery charge indicator on your device to make sure the charging process starts normally.
3. Unplug the cable when your device is fully charged.

CAUTION:

Before charging, please refer to the user manual of the device you wish to charge to make sure the charging current requested does not exceed 1A (1000mA). Overloading the charging circuit may damage the unit permanently and void the warranty.

1. The USB charging port of this unit supplies a DC 5V output at 1000mA maximum current to charge your smart phone or portable device battery and it cannot support any other voltage range.
2. Make sure the device you want to charge has a battery charge rating of DC 5V only.
3. The USB port of this unit is designed for smart phone or portable device battery charging only and it cannot support data transfer or connect to computer.
4. Do not connect the USB port of this unit to other external power charger USB ports, it may damage both units and void the warranty.

Note:

1. Some smart phones and portable devices use proprietary USB connections and circuitry, so they may not charge when plugged into the USB port. Please refer to your device user manual before you attempt to charge them.
2. It is normal if the unit gets warm while the USB port is in use and charging your smart phone or portable device.
3. Do not charge your smart phone over 12 hours continuously. Disconnect your smart phone or other portable device from the USB cord once it is fully charged.


WALL MOUNTING

- 1** Drill 2 parallel holes (\varnothing 6mm each) in the wall.
The distance between the holes should be 700 mm.



- 2** Firmly fix 1 dowel into each hole in the wall if necessary.



Dowel

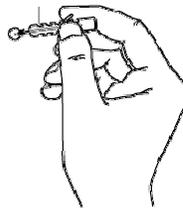

✓ Solid wall (i.e., Solid brick, Solid concrete, Solid wood, Solid wooden battens)

✗ Drywall, Plaster wall, Lath wall, etc.

 - 3** Leave a 8 mm gap between the wall and the screw's head. Lift the unit with the attached wall brackets over the heads of the screws and slot into place.

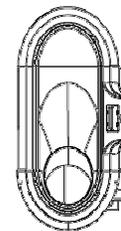

NOTE :

At ON mode, press and hold the Play/Pause ►|| BUTTON (#5) on the JSBW-750 remote control for about 10 seconds to exchange the L/R channels after this soundbar is mounted on a wall, the status indicator will flash twice when the L/R channels are exchanged.

CARE AND MAINTENANCE

1. Do not subject the unit to excessive force, shock, dust or extreme temperature.
2. Do not tamper the internal components of the unit.
3. Clean your unit with a dry cloth. Solvent or detergent should never be used.
4. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
5. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture, Use caution when cleaning and wiping the plastic parts.

- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLE SHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
No Power	The unit is disconnected from the AC outlet AC outlet is not functioning Power On/Off Switch is off	Reconnect to the AC outlet Change to another outlet Set the Power On/Off Switch to On
Remote Control does not work	Battery empty Installed battery wrong polarity Too far from the main unit	Replace battery Re-install battery in correct polarity Reduce the distance
No Sound	Select wrong source input	Select correct source input
Sound is distorted	Volume level is set too high	Decrease the volume level
Unit gets warm after extended play at high volume	This is normal	Turn the unit off for a period of time or lower volume
No sound when playing audio via Bluetooth	Your Bluetooth device has been paired The volume control of your Bluetooth device is set at too low The volume control of main unit is set at too low	According to the "Bluetooth operation" Increase the volume of your Bluetooth device Increase the volume of main unit to adjust the VOLUME control

SPECIFICATION

Power Input	120V~60Hz
Power Consumption	45 W
USB Output	5V $\overline{=}$ 1A
Output Power (RMS)	10Wx2 +40W (Bass)
Mid-High Range Speaker	2 x 2" 8Ohm 10W
Woofer Speaker	4 x 2" 4Ohm 10W
Frequency Response	40Hz-20KHz
Remote Control	1 x DC 3V $\overline{=}$ CR2032 button cell (included)

SPECTRA GREEN NOTICE



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Spectra Merchandising International, Inc. is under license. Other trademarks and trade names are those of their respective owners.

90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for \$60.00 to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectraintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA. 1-800-777-5331

To register your product, visit the link on the website below to enter your information.
<http://www.spectraintl.com/wform.htm>

0315

Printed in China